

MST

MAX SPEED TECHNOLOGY

EX-10S

 
1 / 10 DRIFT CHASSIS

INSTRUCTION MANUAL

ON ROAD USE ONLY
FULL BALL BEARINGS

WHEELBASE : STANDARD 257mm (adjustable)
WIDTH : STANDARD 190mm (adjustable)
GEAR RATIO : 2.12 (36T/17T)
CASTER : 8 degrees variableness
CAMBER : 0 to -12 degrees


www.rc-mst.com
※ SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE




0.05" L Wrench
0.05" L 板手



 1.27
Hex



5.5 & 7.0 Alum. wrench
5.5 & 7.0 套筒板手

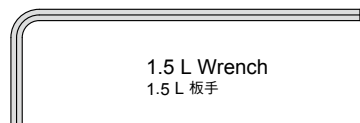

1.5 L Wrench
1.5 L 板手




1.5
Hex



3×35 Pin
3×35 插銷



M3×3 screw ×2
M3×3 止付螺絲

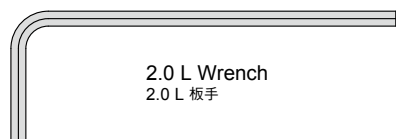


2.0 L Wrench
2.0 L 板手



2.0
Hex



Antenna pipe
天線管

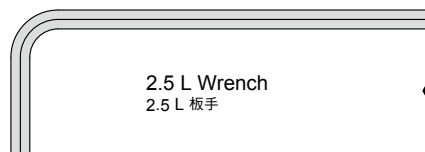


2.5 L Wrench
2.5 L 板手



2.5
Hex



R-clip ×5
R形扣

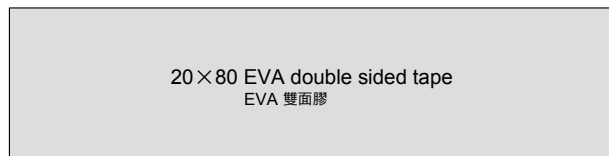


20×80 EVA double sided tape
EVA 雙面膠



20×80 Sponge
吸震泡棉



Inner sponge
吸震泡棉

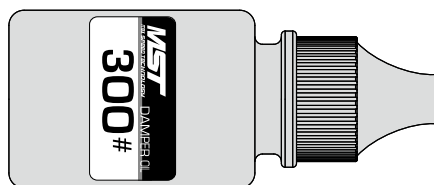

Damper oil #300
避震油 #300

 


Black grease
黑油


NECESSARY TOOLS FOR ASSEMBLY 工具需求 (NOT INCLUDED IN KIT) [另購]




Hobby knife
美工刀




Screwdriver
螺絲起子

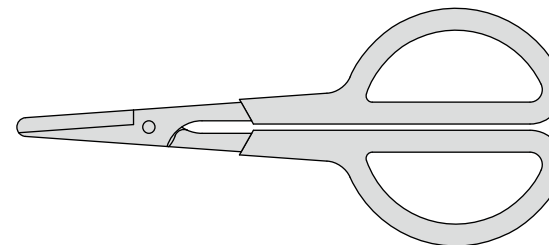

Scissors
剪刀

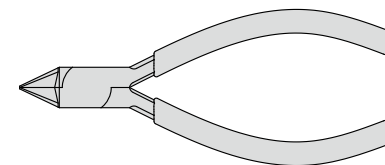

Side cutter
斜口鉗

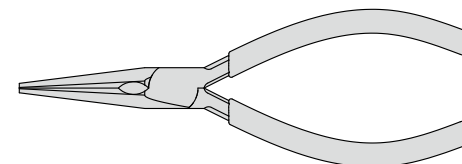


Needle nose pliers
尖嘴鉗



210272
Turnbuckle wrench
拉桿板手

 
Please follow the assembling figures and instructions closely
for your [XXX-D VIP HT] best performance!
請依照說明書圖示步驟安裝以發揮 [XXX-D VIP HT] 最好效能！




20×80 sponge ×1
泡棉



 
Battery guard ×1
電池擋板




Side opening guard mount ×1
側開式擋板座

 

Side opening guard cover ×1
側開式擋板蓋

 

L Battery guard ×1
L型電池擋板

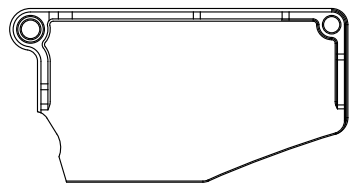

Side opening ESC plate ×1
側開式電變托盤



M3×8 screw ×8
沉頭螺絲



M3×10 screw ×1
沉頭螺絲



M3×5 screw ×1
十字扁頭螺絲



 
M3×14 screw ×1
圓頭螺絲




Side opening guard knob ×1
側開式擋板門把



P3 O-ring (black) ×1
O環 (黑)



Suspension mount (-0.5) ×1
下擺臂座 (-0.5)

 

Suspension mount (+0.5) ×1
下擺臂座 (+0.5)

OPTIONAL PARTS



820036
Alum. suspension mount (-0.5)
鋁合金下擺臂座 (-0.5)



820037
Alum. suspension mount (+0.5)
鋁合金下擺臂座 (+0.5)

※ 210321 suspension balls 2.5×5 is required for Alum. suspension mount installing.
以上搭配 (210321) 插銷球頭才可使用。

STEP 1 Attaching sponge


安裝泡棉



20×80 sponge
泡棉

X2
Make 2

20×40 sponge
泡棉

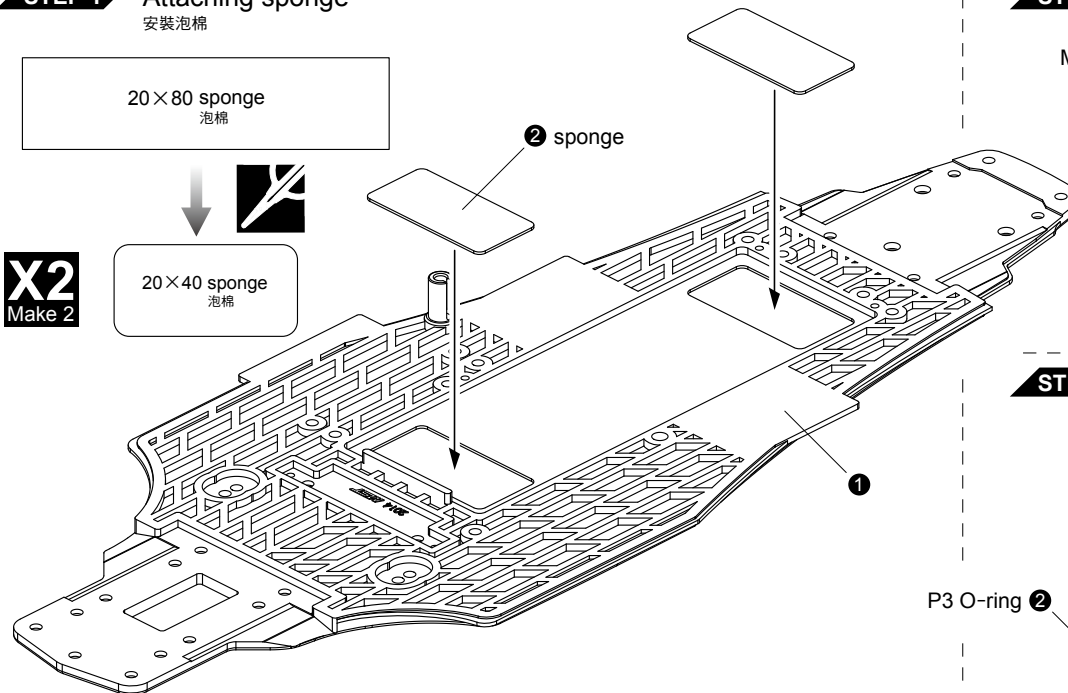


STEP 2 Battery guard assembly

電池擋板組裝

M3×14 ③

① side opening guard mount

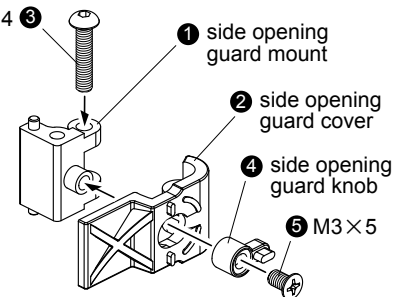


② side opening guard cover

④ side opening guard knob

⑤ M3×5

STEP 3 ESC plate assembly

電變托盤組裝

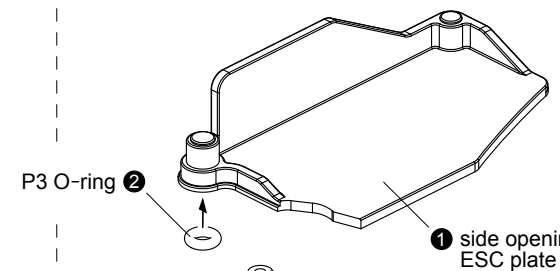

P3 O-ring ②


① side opening ESC plate

STEP 4 Front & rear suspension mount assembly

前後下擺臂座組裝

FRONT


① suspension mount (+0.5)

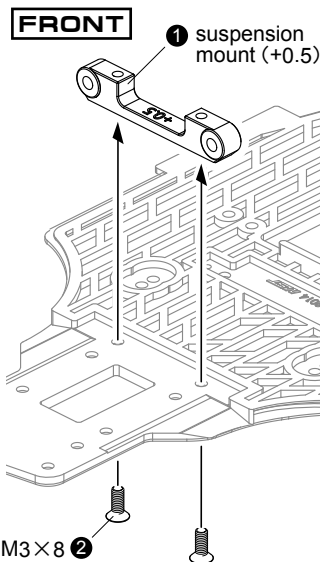

M3×8 ②

REAR


① suspension mount (-0.5)

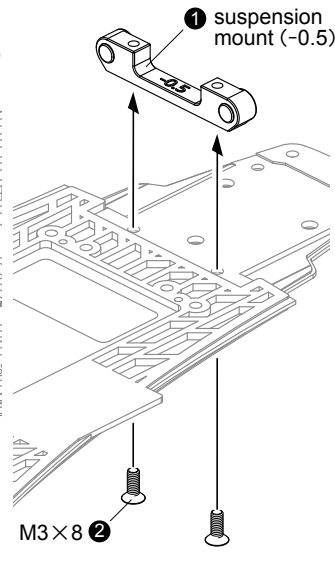

M3×8 ②

STEP 4 Attaching battery guard

安裝電池擋板

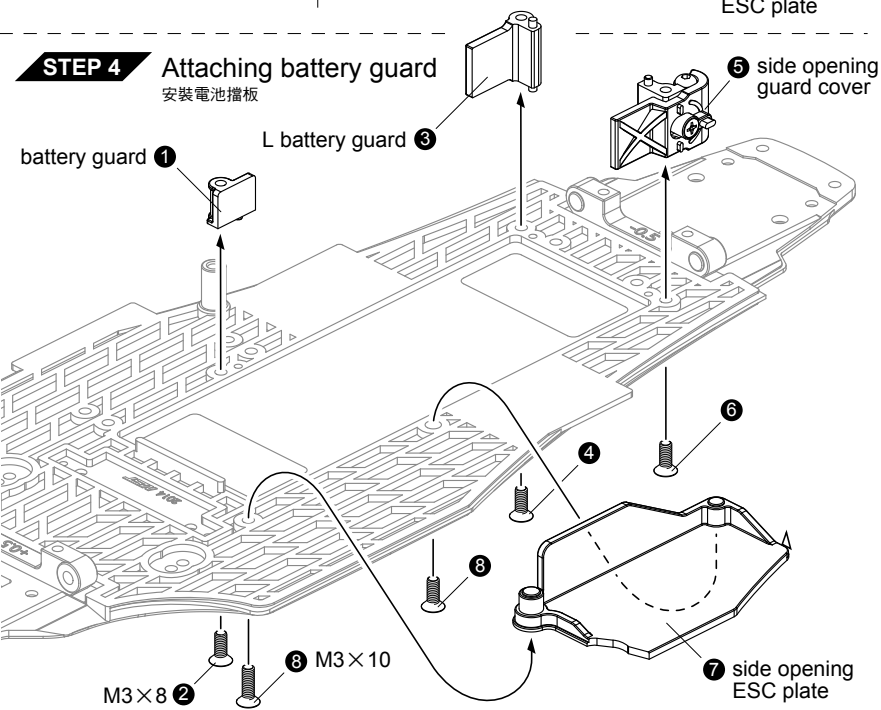

battery guard ①

 

L battery guard ③

⑤ side opening guard cover












⑦ side opening ESC plate

M3×8 ②

⑧ M3×10

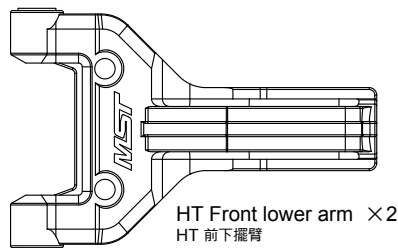

           2.5×46 arm shaft ×2
擺臂插銷





OPTIONAL PARTS



※210321 suspension balls 2.5×5 is required for Alum. suspension mount installing.
以上搭配 (210321) 插銷球頭才可使用。


STEP 1 Front lower arm assembly

前下擺臂組裝

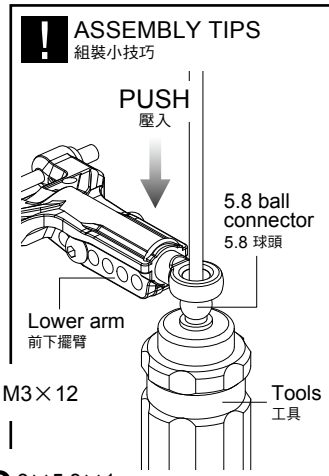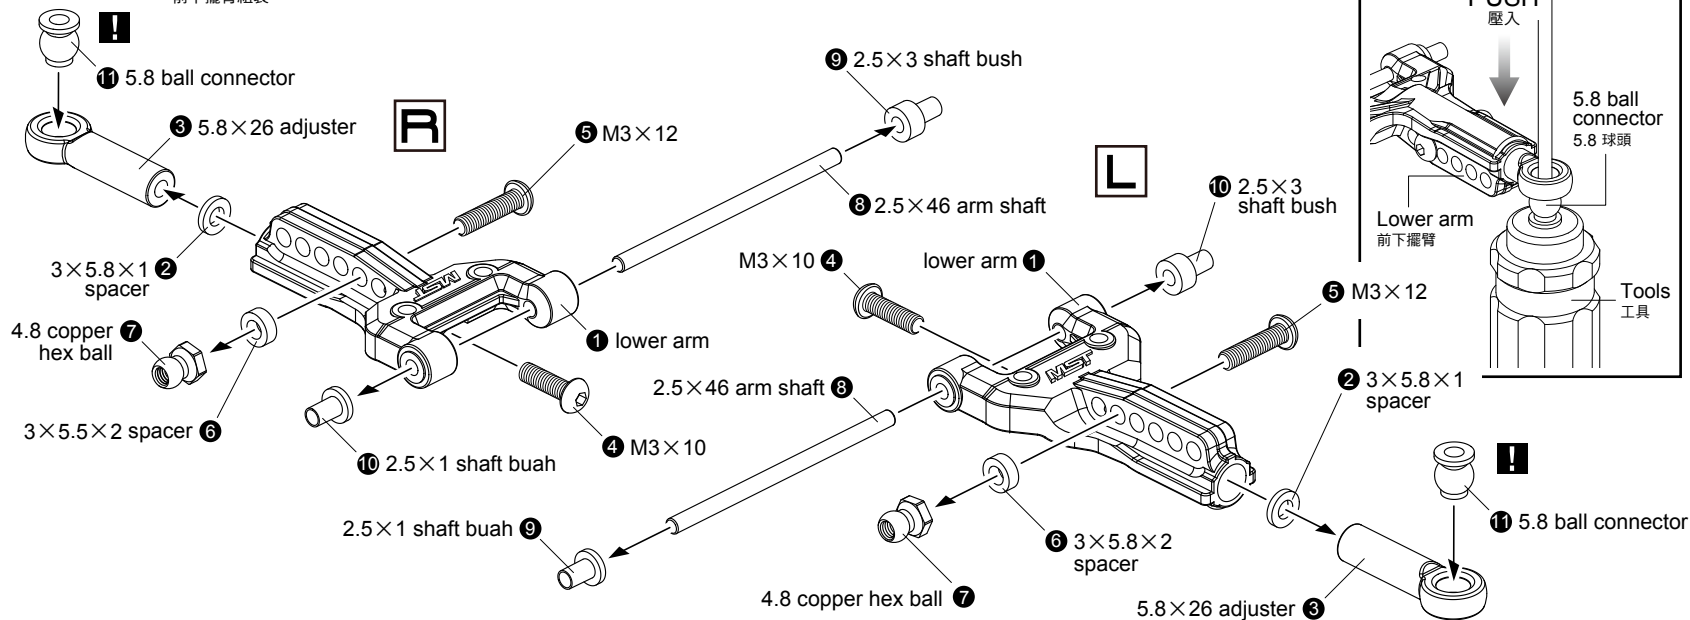


STEP 2 Attaching front lower arms

安裝前下擺臂

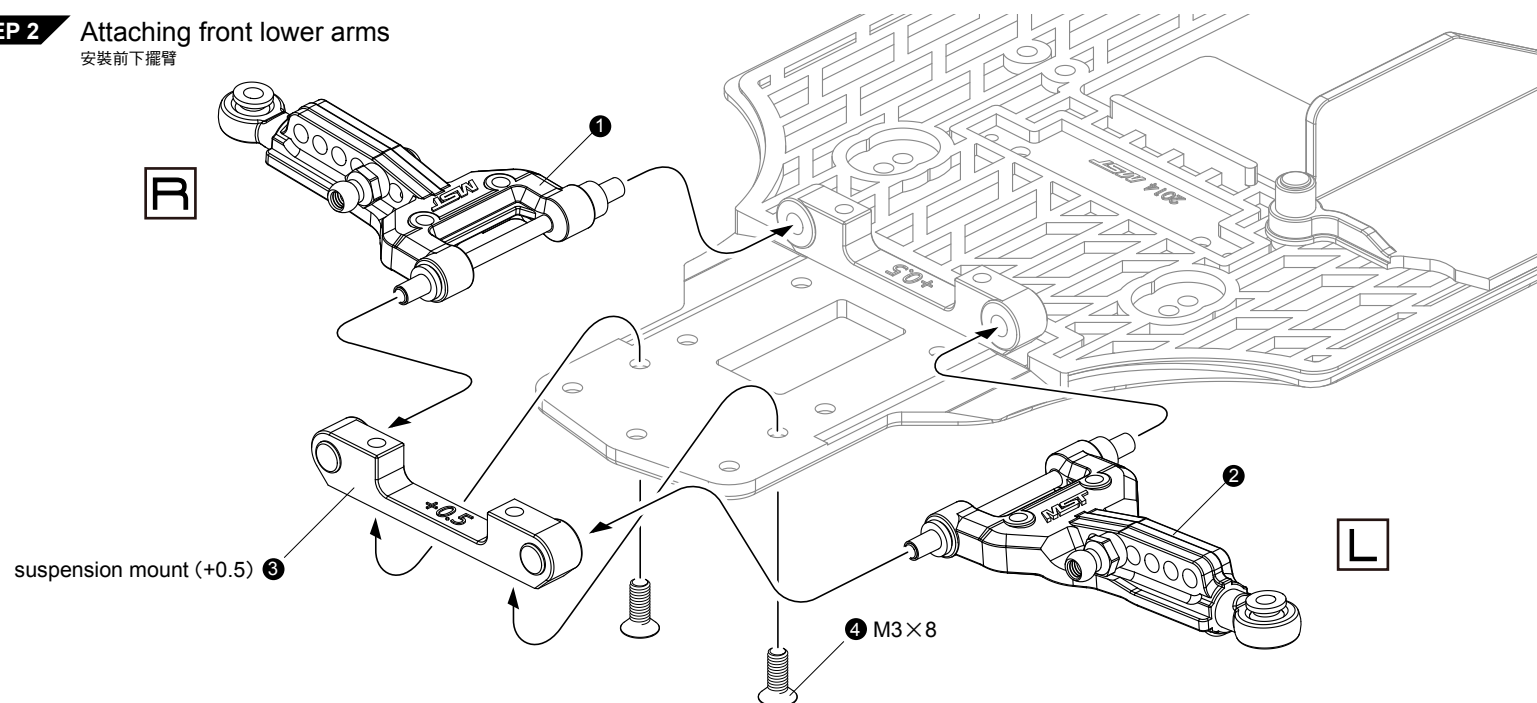




Steering joint plate ×1
轉向連接板

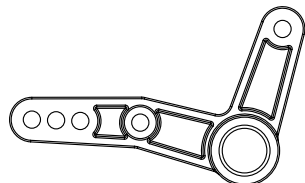

Steering arm post ×2
轉向搖臂支柱

 


Steering arm A ×1
轉向搖臂A


Steering arm B ×1
轉向搖臂B



 
Steering adjuster ×2
轉向拉桿




M3×6 screw ×2
圓頭螺絲

 


M3×14 screw ×1
圓頭螺絲

 

M3×7 screw ×2
十字扁頭螺絲

 


M3×6 screw ×2
圓頭螺絲(半牙)

 


4.8 ball connector L ×1
外六角球頭(長)



 4.8×4.5 copper ball connector ×2
銅製球頭螺絲




3×5.8×3 spacer ×1
墊片

 


5×8×2.5 spacer ×4
墊片

 OPTIONAL PARTS




210388
FXX Carbon steering joint plate 2.5
FXX 碳纖維轉向連接板 2.5


STEP 1 Attaching steering arm post 安裝轉向搖臂支柱

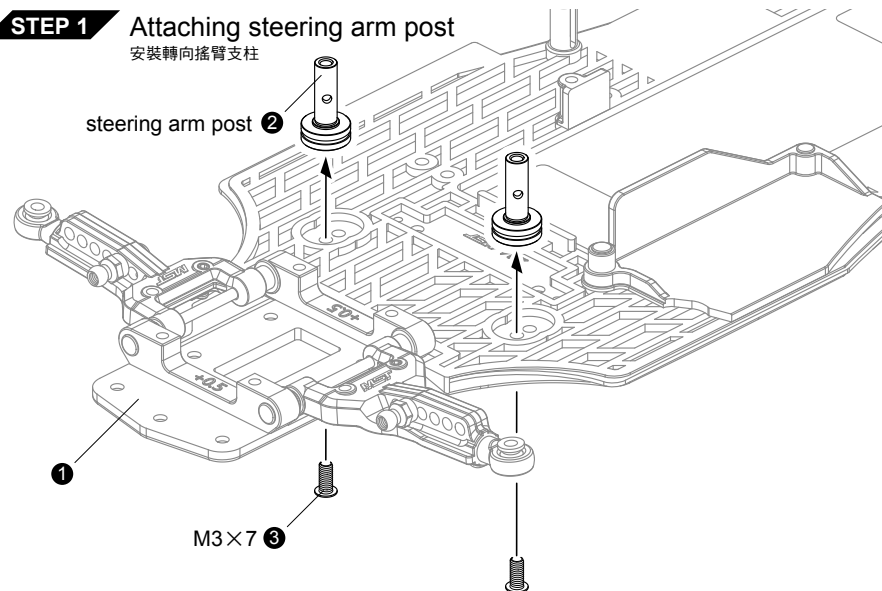


STEP 2 Attaching steering joint plate 組裝轉向連接板






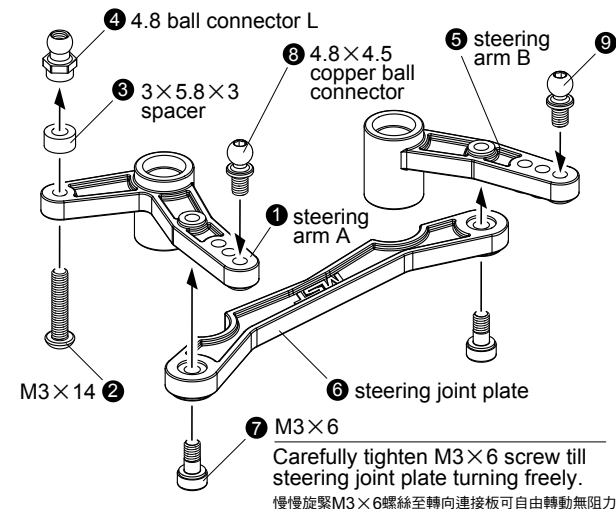


STEP 3 Attaching steering arm 安裝轉向搖臂組


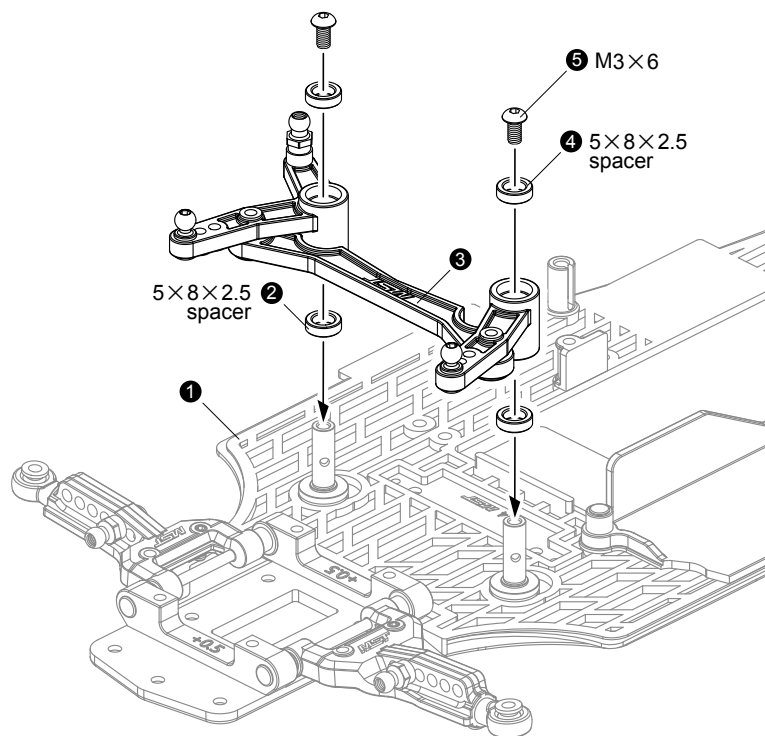


      STEP 2 Attaching steering adjuster 安裝轉向拉桿

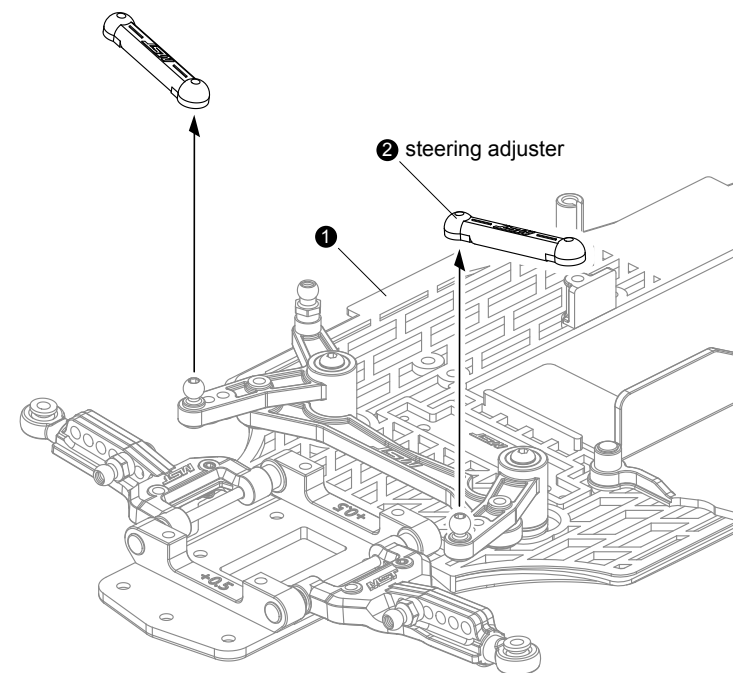



Front upper arm A × 1
前上擺臂AFront upper arm B × 1
前上擺臂BFront upper arm C × 1
前上擺臂CFront upper arm D × 1
前上擺臂D5.8×26 Adjuster × 2
拉桿頭M2.5×6 screw × 4
圓頭螺絲M3×25 screw × 2
圓頭螺絲5.8 ball connector × 2
球頭3×5.8×4 spacer × 2
墊片


ADDITIONAL PURCHASE

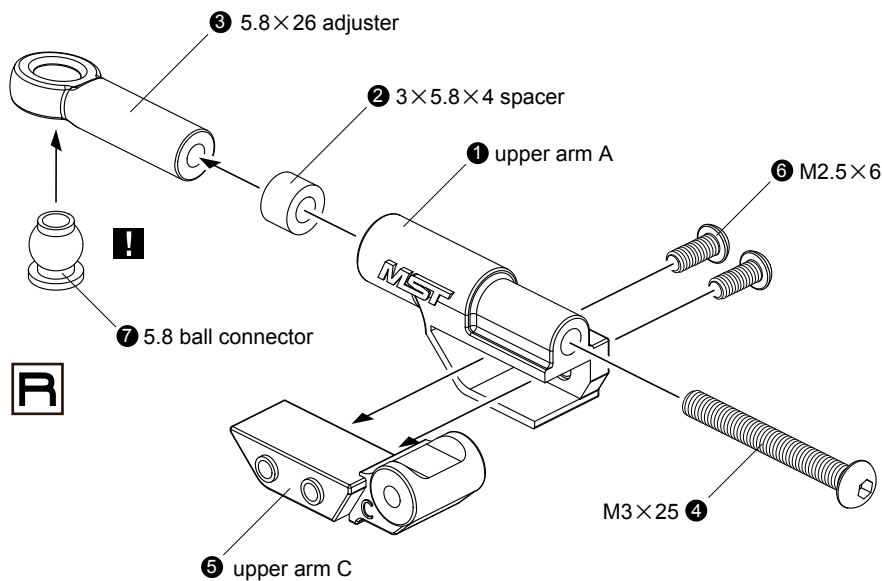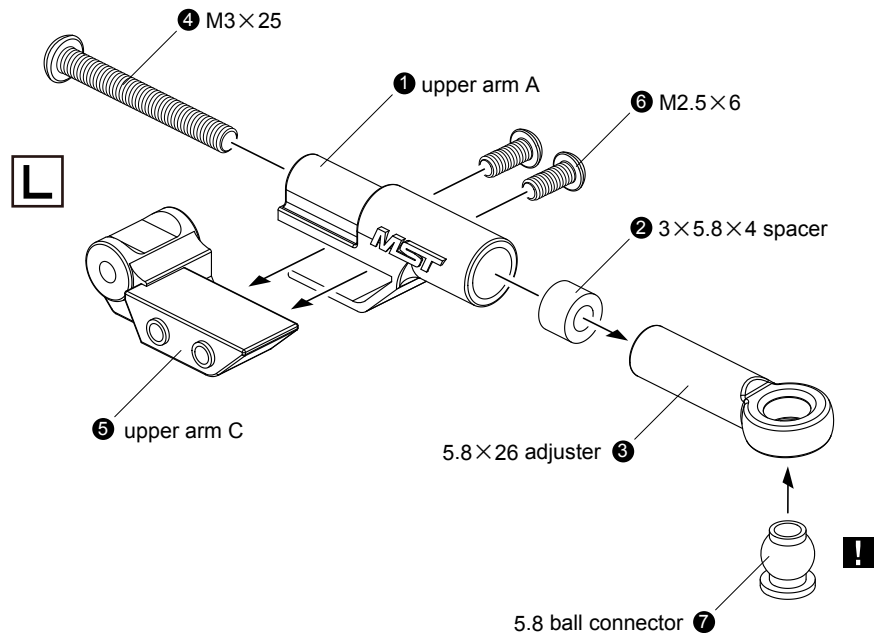Caster block E
上擺臂墊片ECaster block F
上擺臂墊片F210061
HT Upper arm spacer
HT上擺臂墊片組STEP 1 Front upper arm assembly
前上擺臂組裝

CASTER SETTING

A, C, E, are available for swapping using.
Please refer to below instructions.
Below diagrams are for right arm installation.

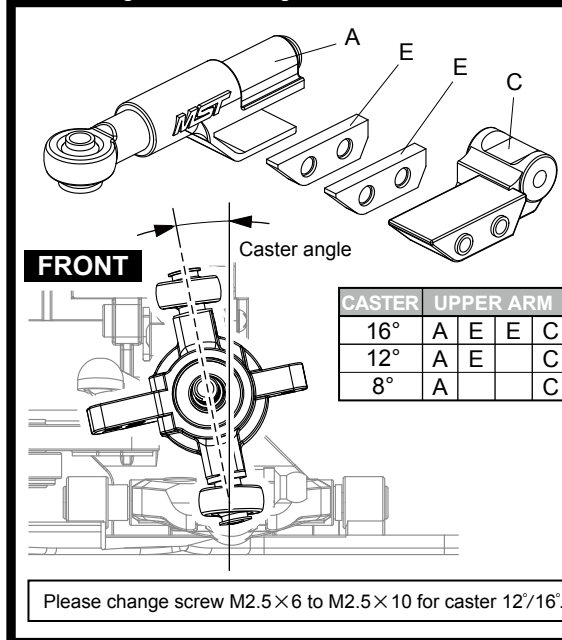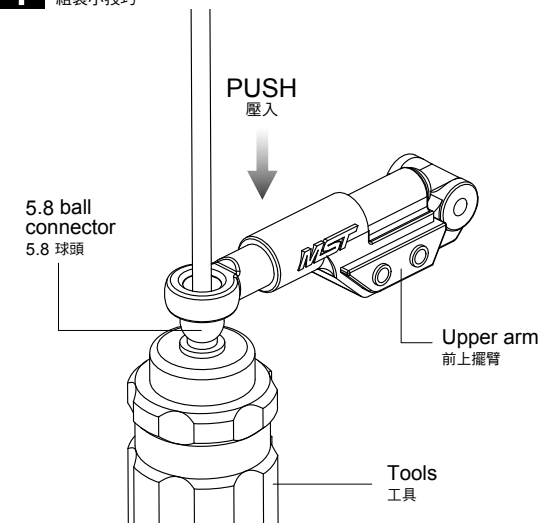! ASSEMBLY TIPS
組裝小技巧

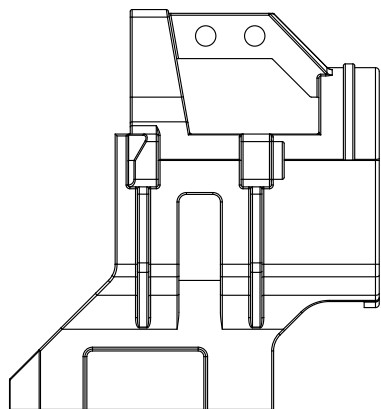

Motor mount ×1
馬達座


2.5×20 arm shaft ×2
擺臂插銷

M3×6 screw ×2
圓頭螺絲

3×7 screw ×4
自攻沉頭螺絲


M2×3 screw ×4
十字螺絲

OPTIONAL PARTS

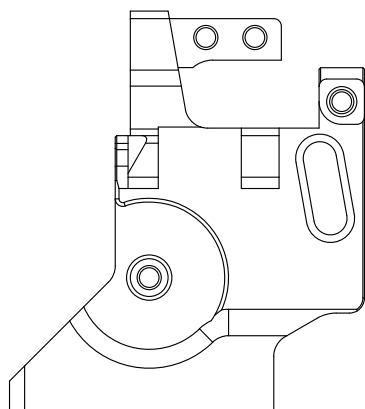


210340
FXX Alum. motor mount set
FXX 鋁合金馬達座組


STEP 1 Attaching motor 安裝馬達

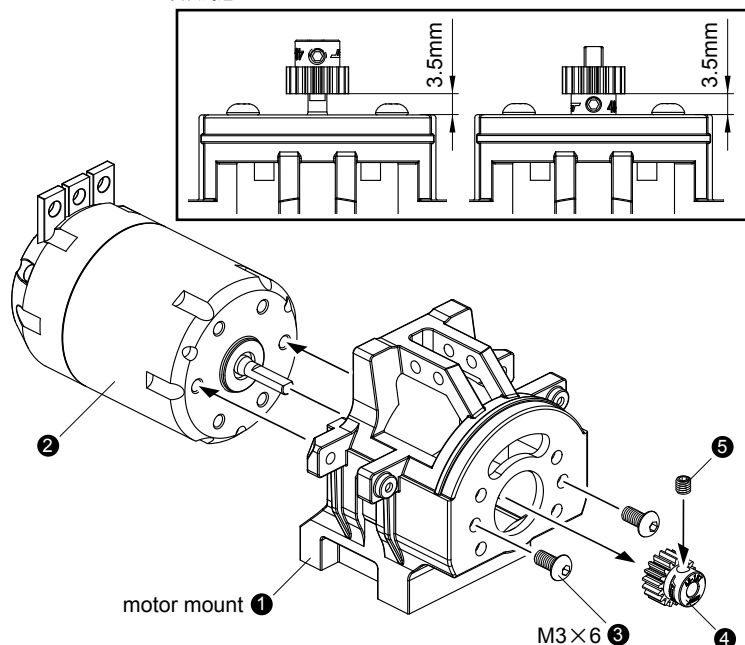


STEP 2 Attaching motor mount 安裝馬達座

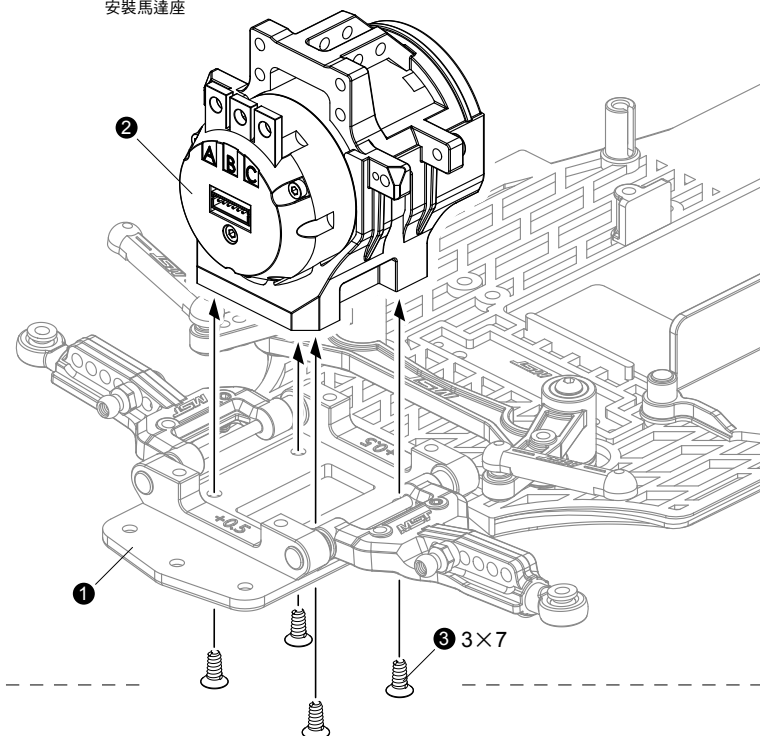

STEP 3 Attaching front upper arm 安裝前上擺臂

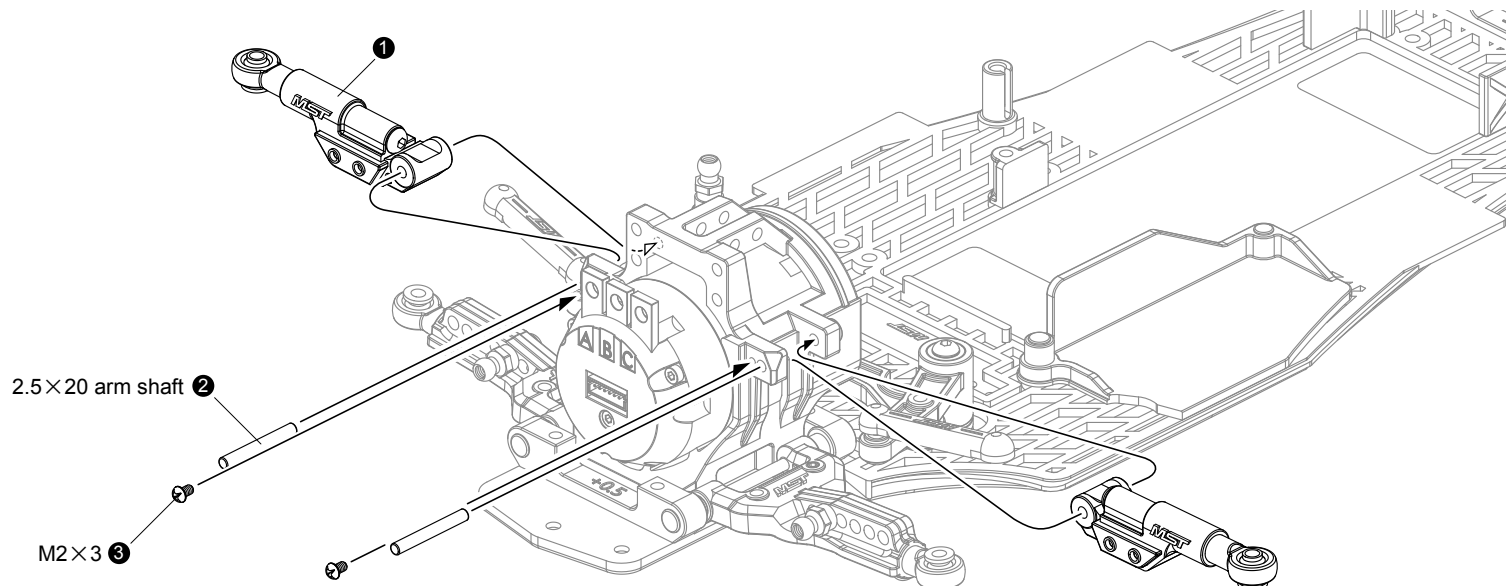

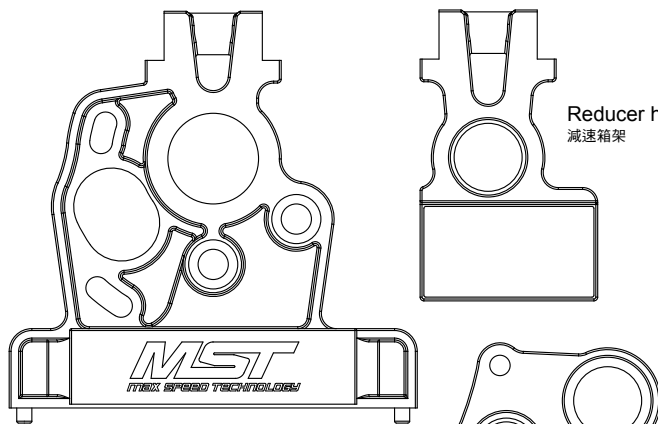

Reducer holder ×1
減速箱架

Gear ratio adjuster ×1
齒比調整架

Reducer mount ×1
減速箱座


Drive gear shaft ×1
驅動齒軸




Gear B 20T ×1
齒輪 B 20T




Gear A 28T ×1
齒輪 A 28T

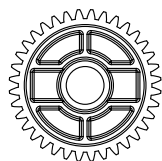


Gear C 36T ×1
齒輪 C 36T

 


M2×6 screw ×1
圓頭螺絲

 


M3×6 screw ×1
圓頭螺絲

 

M3×8 screw ×4
圓頭螺絲

 

M2×8 screw ×1
圓頭螺絲 (半牙)

 


M3×8 screw ×2
圓頭螺絲




Gear C shaft ×1
終齒軸



 
Propeller shaft joint ×1
中軸接杯



 
1.5×7.8 shaft ×1
插銷




2×11.8 shaft ×1
插銷

 

3×6×0.5 spacer ×3
墊片

 


4×6×0.1 spacer ×1
墊片

 

4×6×0.3 spacer ×1
墊片



 E-Clip 3.0 ×1
E扣 3.0




4×8 ball bearing ×2
培林




5×10 ball bearing ×2
培林


STEP 1 Gear ratio adjuster assembly 齒比調整架組裝

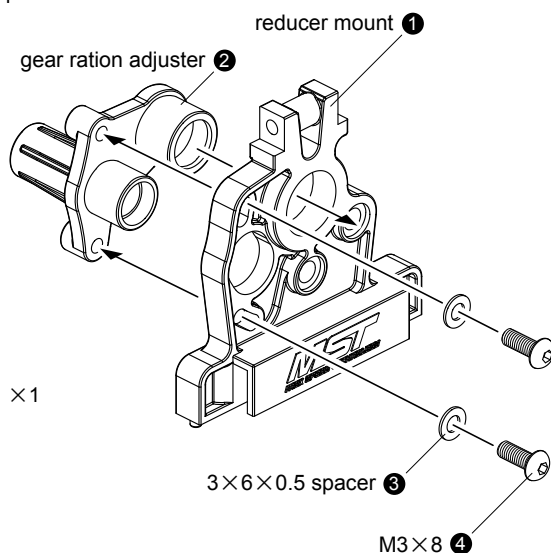


STEP 2 Drive gear assembly 驅動齒組裝

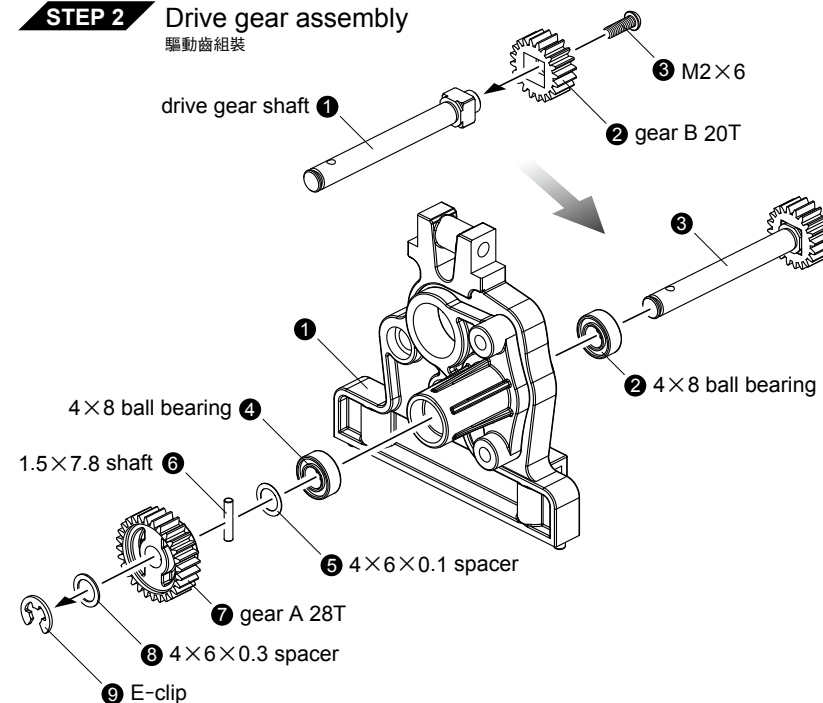




STEP 3 Reducer holder assembly 減速箱架組裝

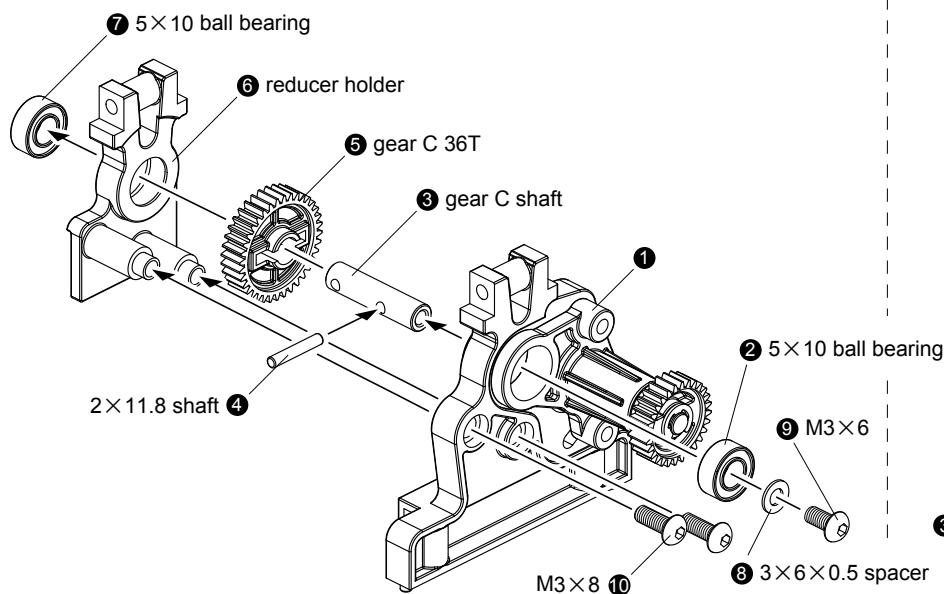



STEP 4 Propeller shaft joint assembly 中軸接杯組裝

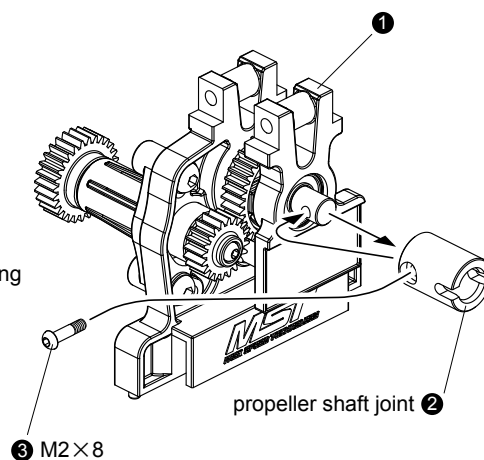

STEP 5 Attaching reducer 安裝減速箱

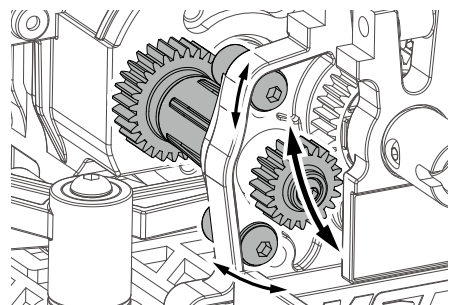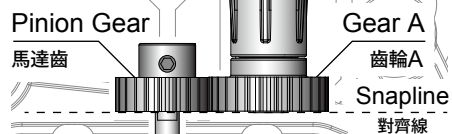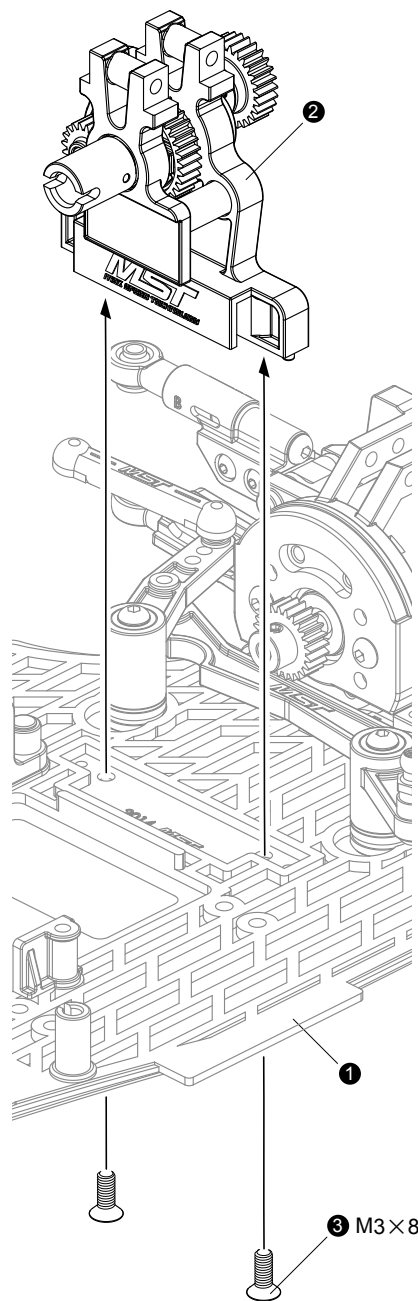

* Loose both screws to adjust gear space.
調整齒輪間隙時，將上圖2螺絲鬆開後即可上下調整！

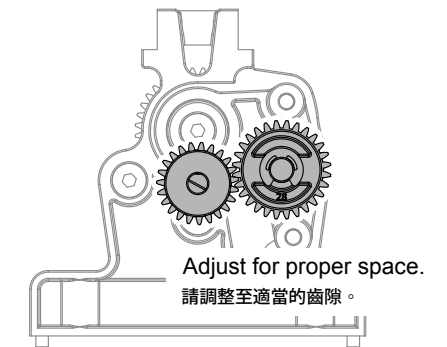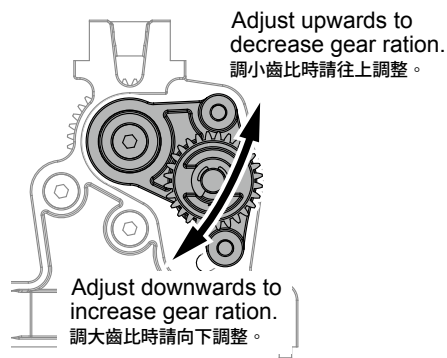


Adjust for proper space.
請調整至適當的齒隙。


PARTS BAG

7

REAR LOWER ARM 後下擺臂

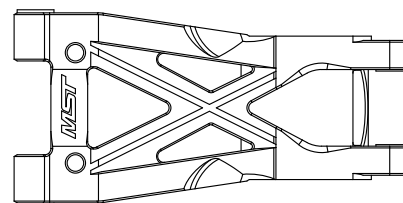

HT rear lower arm × 2
HT 後下擺臂

 

Suspension mount (+2.5) × 1
下擺臂座 (+2.5)



2.5×46 arm shaft × 2
擺臂插銷



4.8 copper hex ball × 2
4.8 銅製外六角球頭



2.5×1 shaft bush × 2
軸心轉接套



2.5×3 shaft bush × 2
軸心轉接套



M3×8 screw × 2
沉頭螺絲



M3×10 screw × 2
止付螺絲



OPTIONAL PARTS



820039
Alum. suspension mount (+2.5)
鋁合金下擺臂座 (+2.5)

* 210321 suspension balls 2.5×5 is required for Alum. suspension mount installing.
以上搭配 (210321) 插銷球頭才可使用。

STEP 1 Rear lower arm assembly 後下擺臂組裝

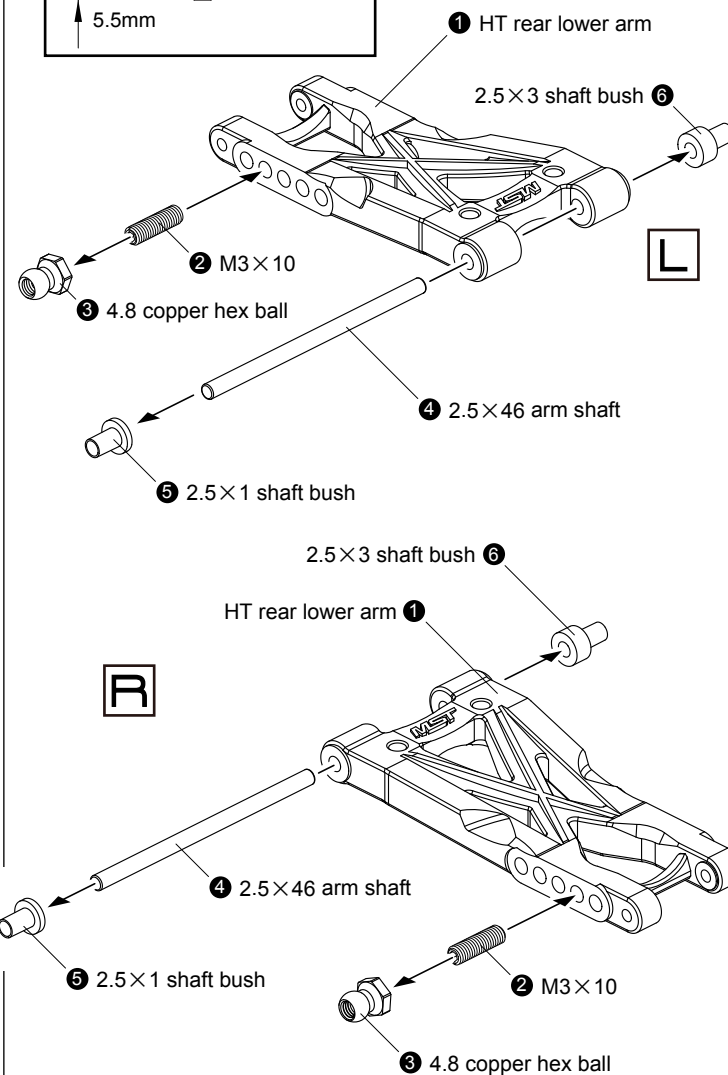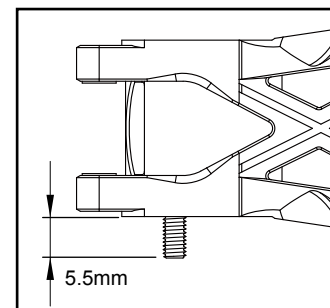

STEP 1 Attaching rear lower arm
安裝後下擺臂

L

REAR ➔

2

6 M3x8

R

Standard Setting 3°

position : RF

position : RR


0° +0.5 +1.0°

+1.5° +2.0 +2.5°


+2.0° +2.5 +3.0°

8

後直軸

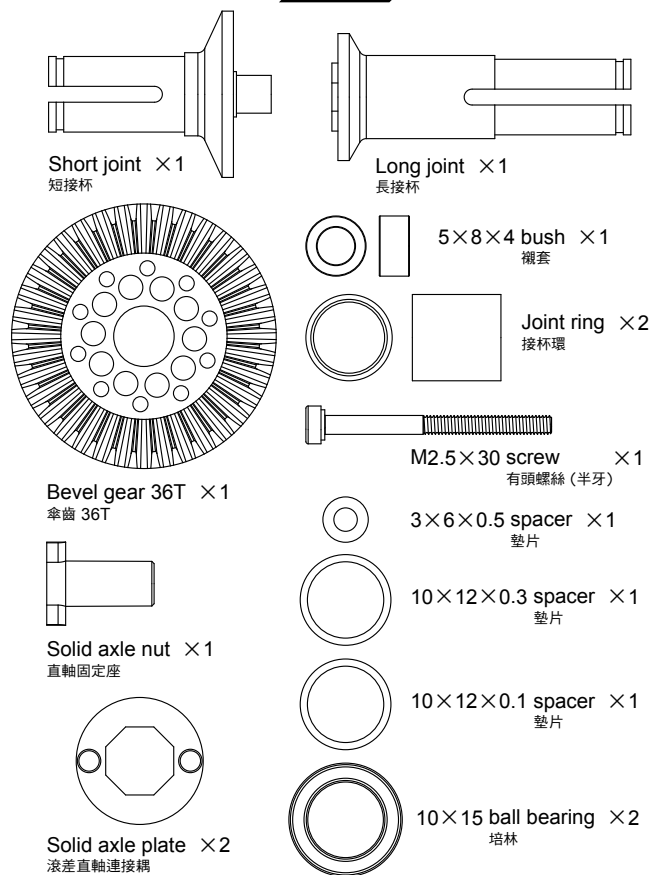

後直軸組裝

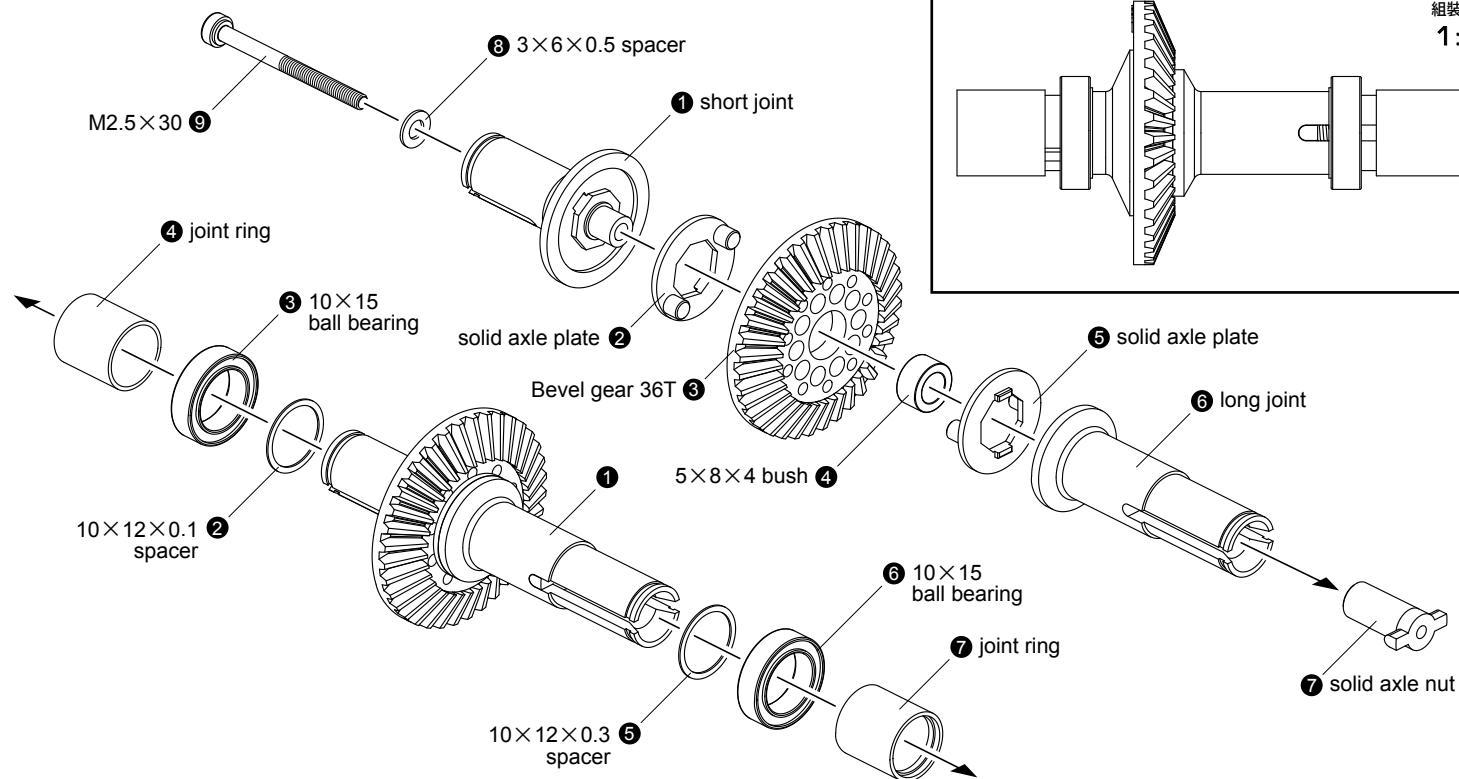


Example
組裝例
1:1

PARTS BAG

9

REAR DRIVEN SHAFT SET

雙節後軸組

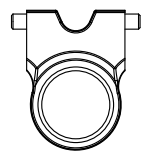

Bearing holder ×1
二樓板培林架



 
6×10×3 Ball bearing ×1
培林



2×9.8 Shaft ×1
插銷 (剖槽)



M3×3 Screw ×1
止付螺絲



FXX Alum. rear driven shaft set ×1
FXX 鋁合金雙節後軸組

OPTIONAL PARTS



210365
FXX Reinforced propeller shaft set
FXX 強化雙節後軸組

STEP 1

Rear driven shaft set assembly

雙節後軸組組裝

5 M3×3

2×9.8 shaft 4

bearing holder 3

2 6×10 ball bearing


1 FXX Alum. rear driven shaft set

PARTS BAG


10

REAR GEAR BOX

後齒箱

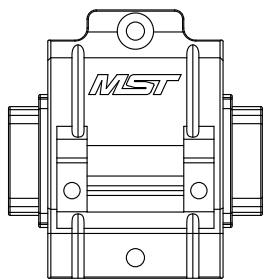

Rear gear box cover ×1
後齒箱蓋

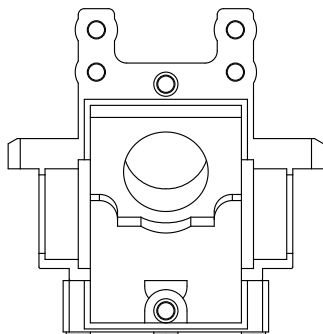

Rear gear box mount ×1
後齒箱座

STEP 1

Attaching rear driven shaft set

安裝雙節後軸組

8×14 ball bearing 3

6 M2×6

5 bevel gear 17T

2 5×10 ball bearing

1 rear gear box mount

4



Rear upper turnbuckle × 2
後上拉桿



M2 × 6 screw × 1
圓頭螺絲



M3 × 8 screw × 2
圓頭螺絲



 
M3 × 8 screw × 3
沉頭螺絲




4.8 × 4.5 copper ball connector × 2
銅製球頭螺絲



5 × 10 ball bearing × 1
培林




8 × 14 ball bearing × 1
培林

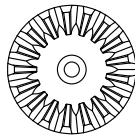

Bevel gear 17T × 1
傘齒 17T


OPTIONAL PARTS

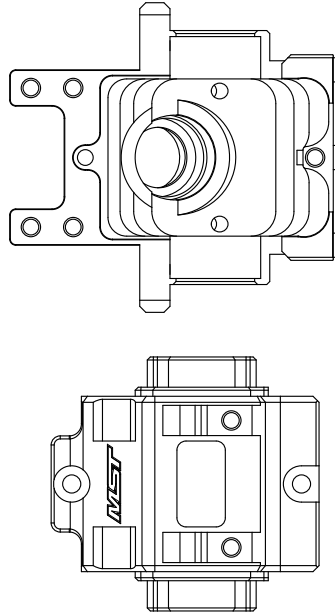

210384
FXX Alum. rear gear box
FXX 鋁合金後齒箱


STEP 2 Rear solid axle (spool) assembly

後重軸組裝

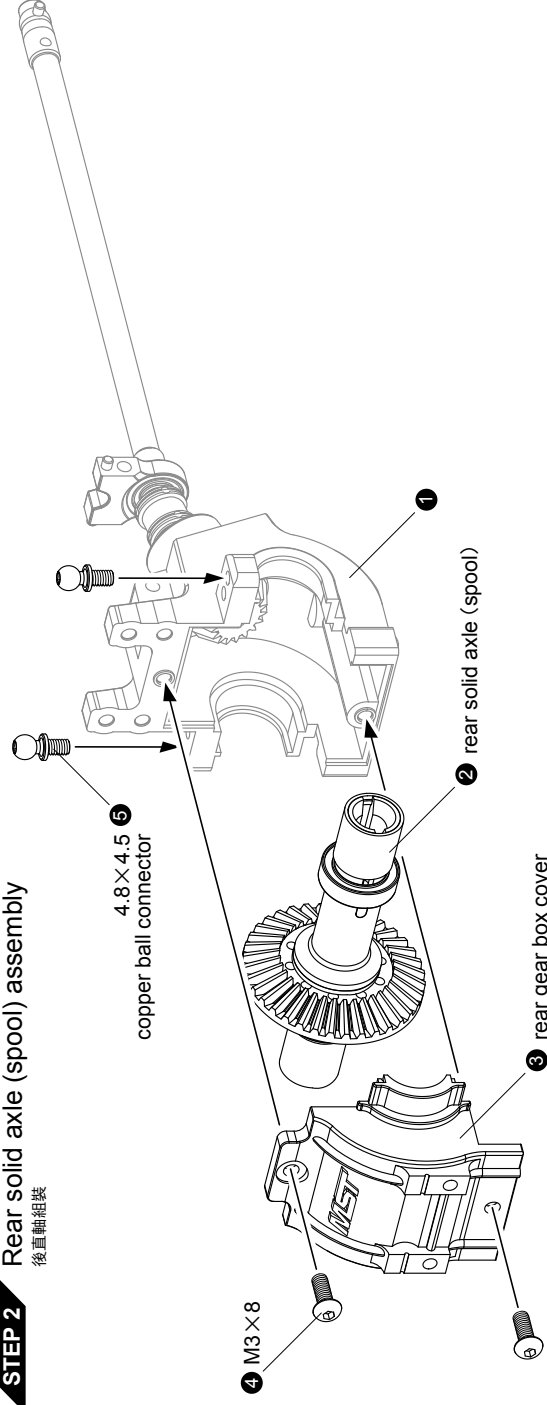


STEP 3 Attaching rear gear box

安裝後齒箱

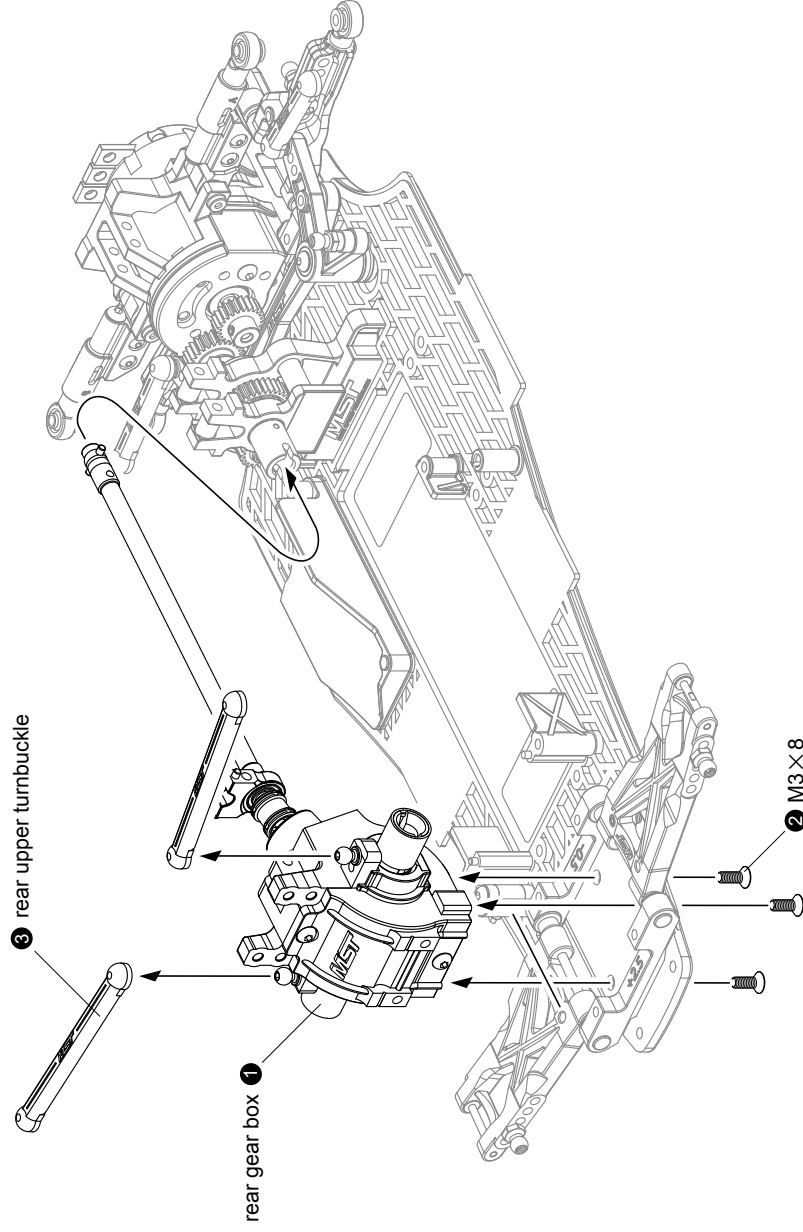


-  M2×5 screw ×4
圓頭螺絲
-  M3×6 screw ×10
圓頭螺絲
-  M2×8 screw ×1
圓頭螺絲
-  3×6 screw ×4
自攻圓頭螺絲

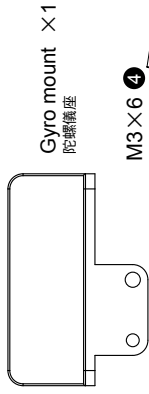


OPTIONAL PARTS



 STEP 1 Attaching upper deck 安裝二樓板

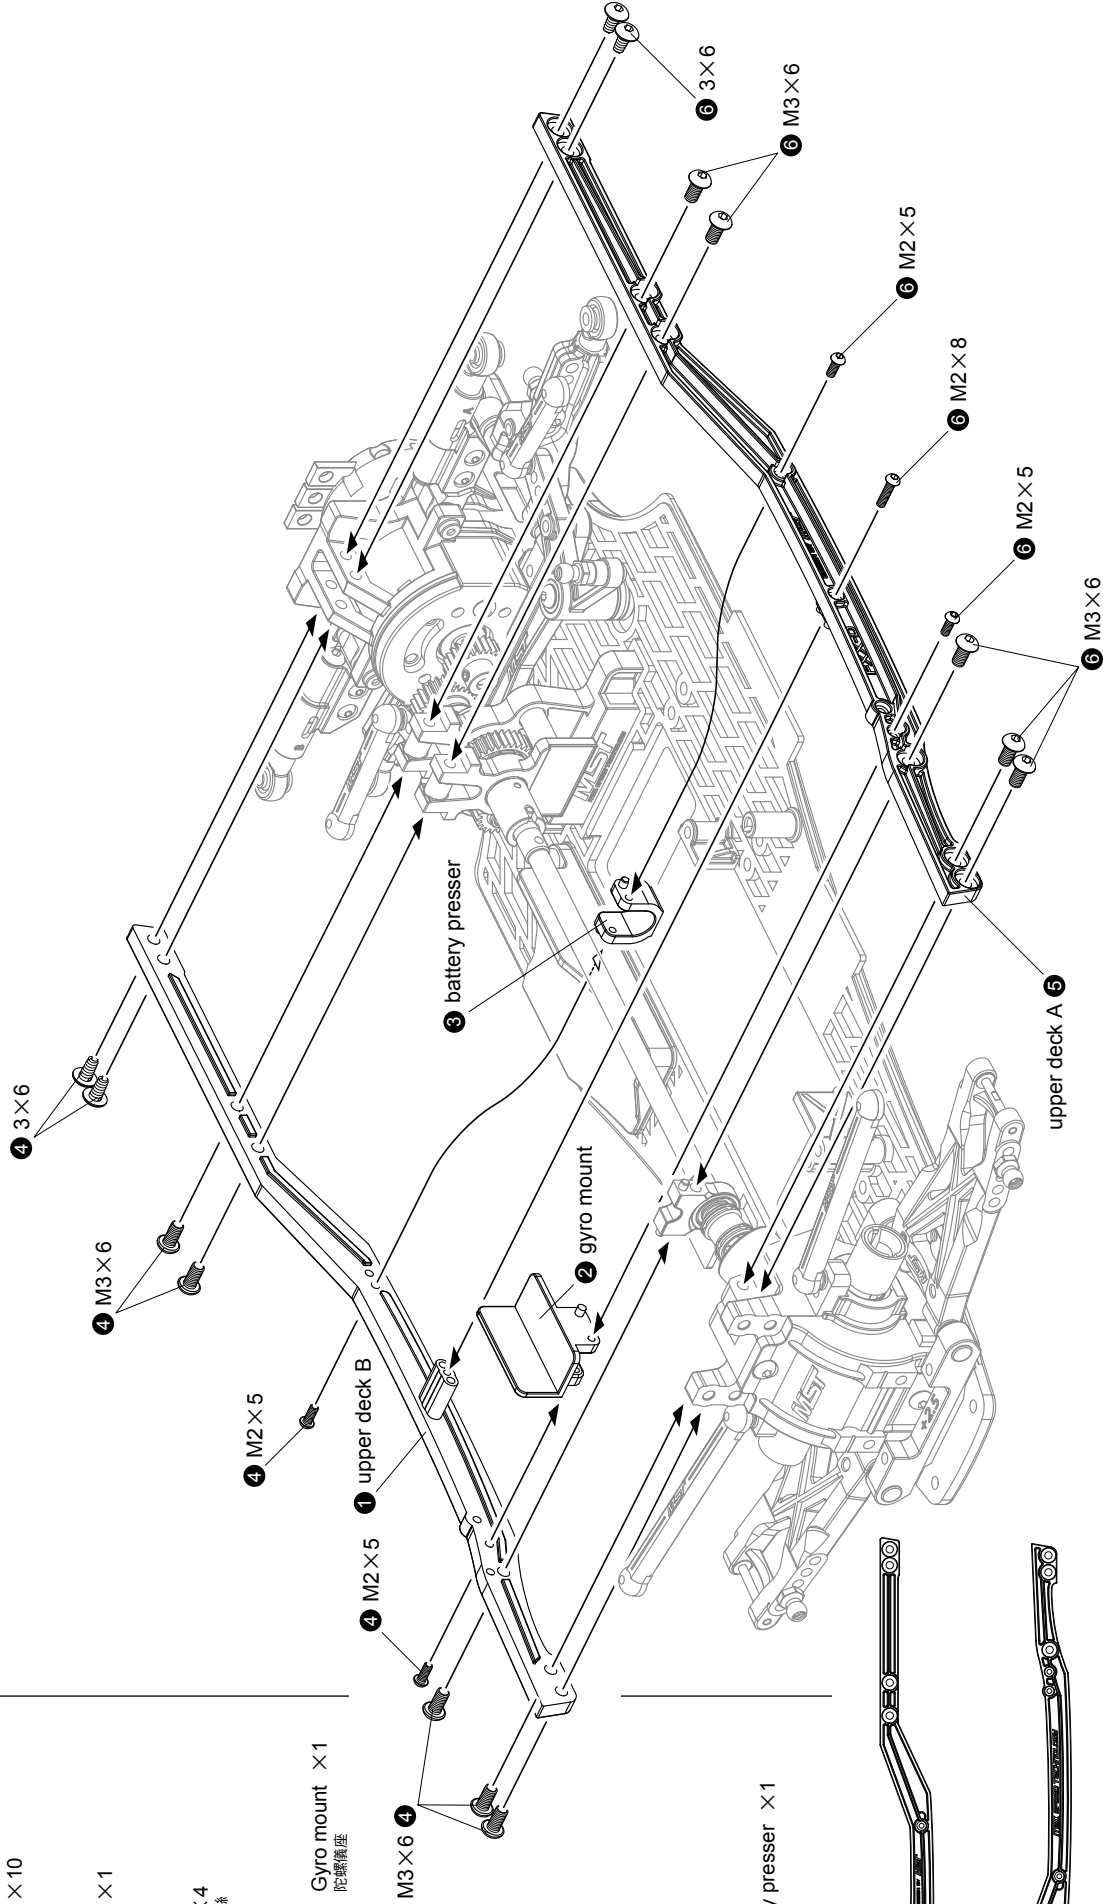



KPI upright A ×1
KPI 輪座 A


KPI upright B ×1
KPI 輪座 B





Brake calipers ×2
煞車卡鉗



Brake calipers mount ×2
卡鉗座

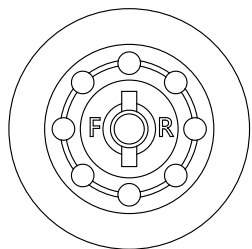

 
Wheel hubs (brake disc shaped) ×2
六角輪座 (煞車碟型)

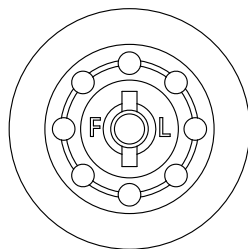

2WD Axle ×2
二驅輪軸



5×11 ball bearing ×2
培林

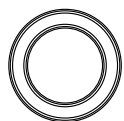

10×15 ball bearing ×2
培林



4.8×4.5 copper ball connector ×2
銅製球頭螺絲



M2×4 screw ×2
圓頭螺絲



M2.5×6 screw ×2
圓頭螺絲




M3×11 screw ×4
十字扁頭螺絲



2×9.8 pin ×2
插銷

STEP 1 Front axle assembly 前輪座組裝

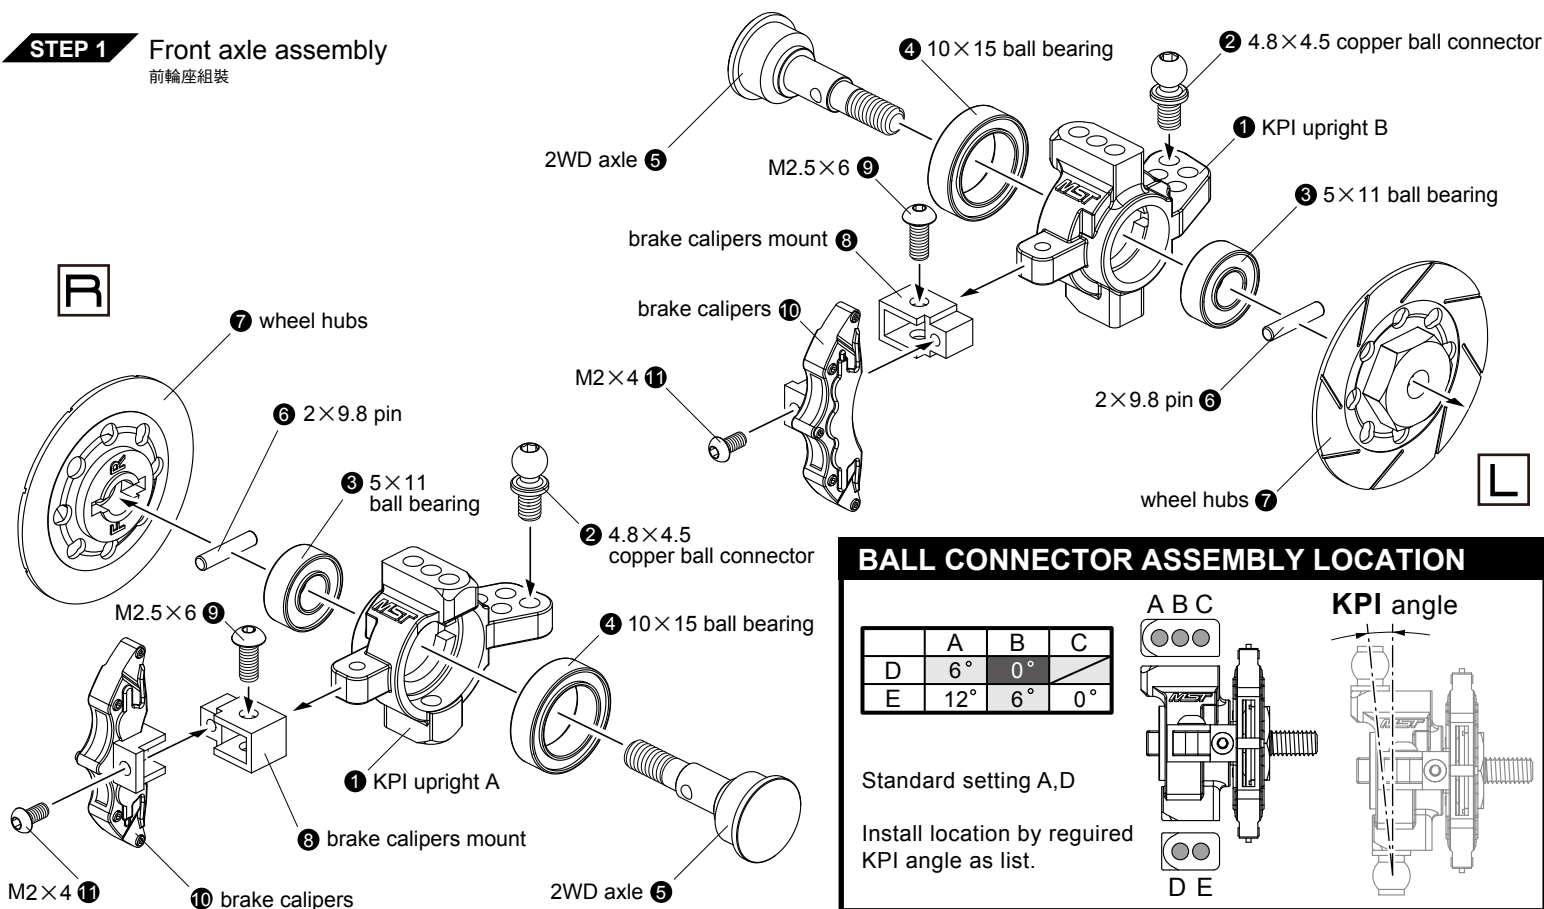


BALL CONNECTOR ASSEMBLY LOCATION


	A	B	C
D	6°	0°	
E	12°	6°	0°

Standard setting A,D
Install location by required KPI angle as list.

Diagram showing KPI angle adjustment with A, B, C, D, E labels.


STEP 2 Attaching front axle 安裝前輪座

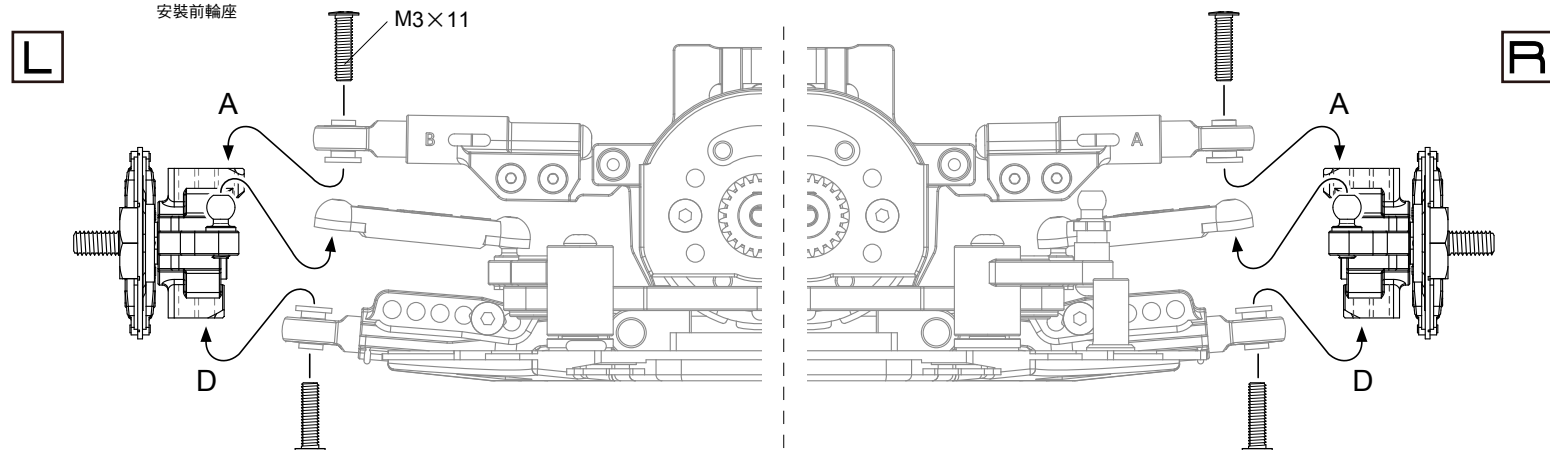

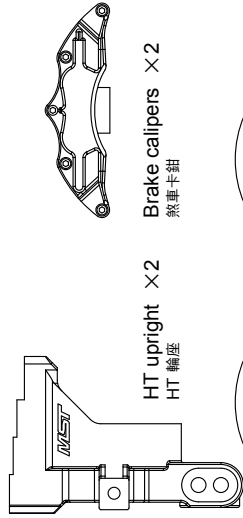


HT upright × 2
HT 輪座

Brake calipers × 2
煞車卡鉗

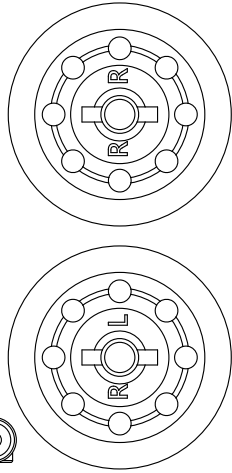

 Wheel hubs (brake disc shaped) × 2
六角輪座 (煞車碟型)



Steel CVA universal shaft 44 × 2
鋼製 CVA 傳動軸 44



 
Wheel axle × 2
萬向接杯



5×11 ball bearing × 2
5×11 培林



10×15 ball bearing × 2
10×15 培林



M2.5×2.5 screw × 2
止付螺絲



M2×4 screw × 2
圓頭螺絲



4.8×4.5 copper ball connector × 2
銅製球頭螺絲




2×9.8 shaft × 4
插銷





2×22 shaft × 2
插銷

STEP 1 Rear axle assembly
後輪座組裝

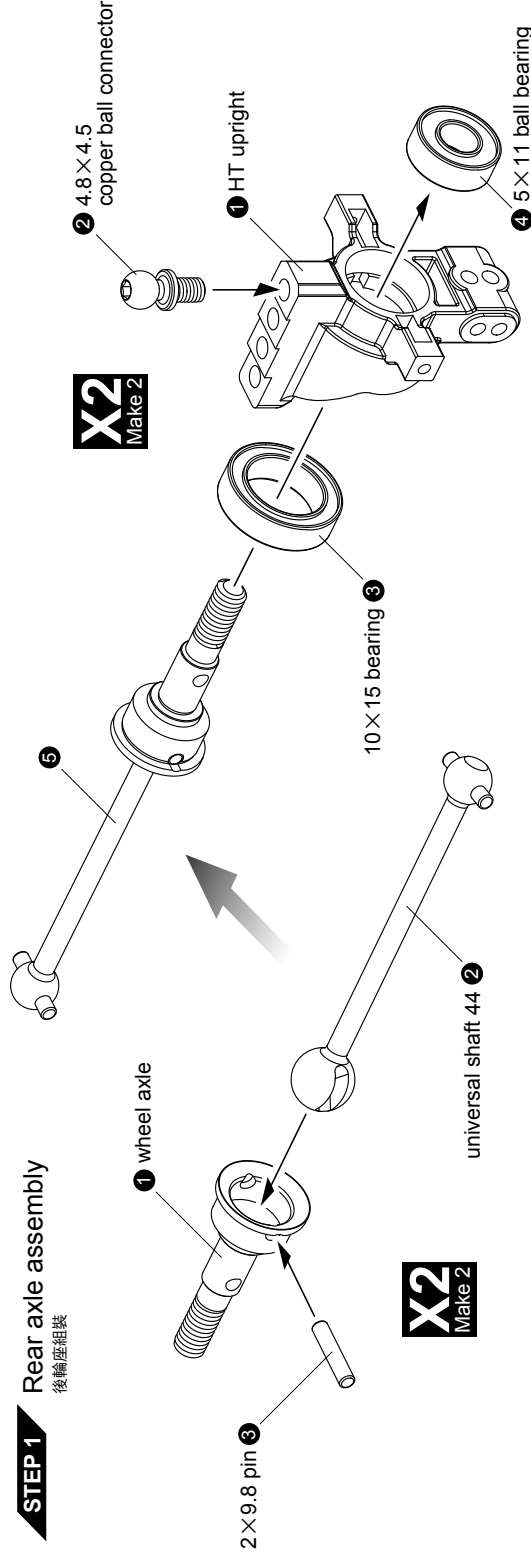


STEP 3 Attaching rear axle
安裝後輪座

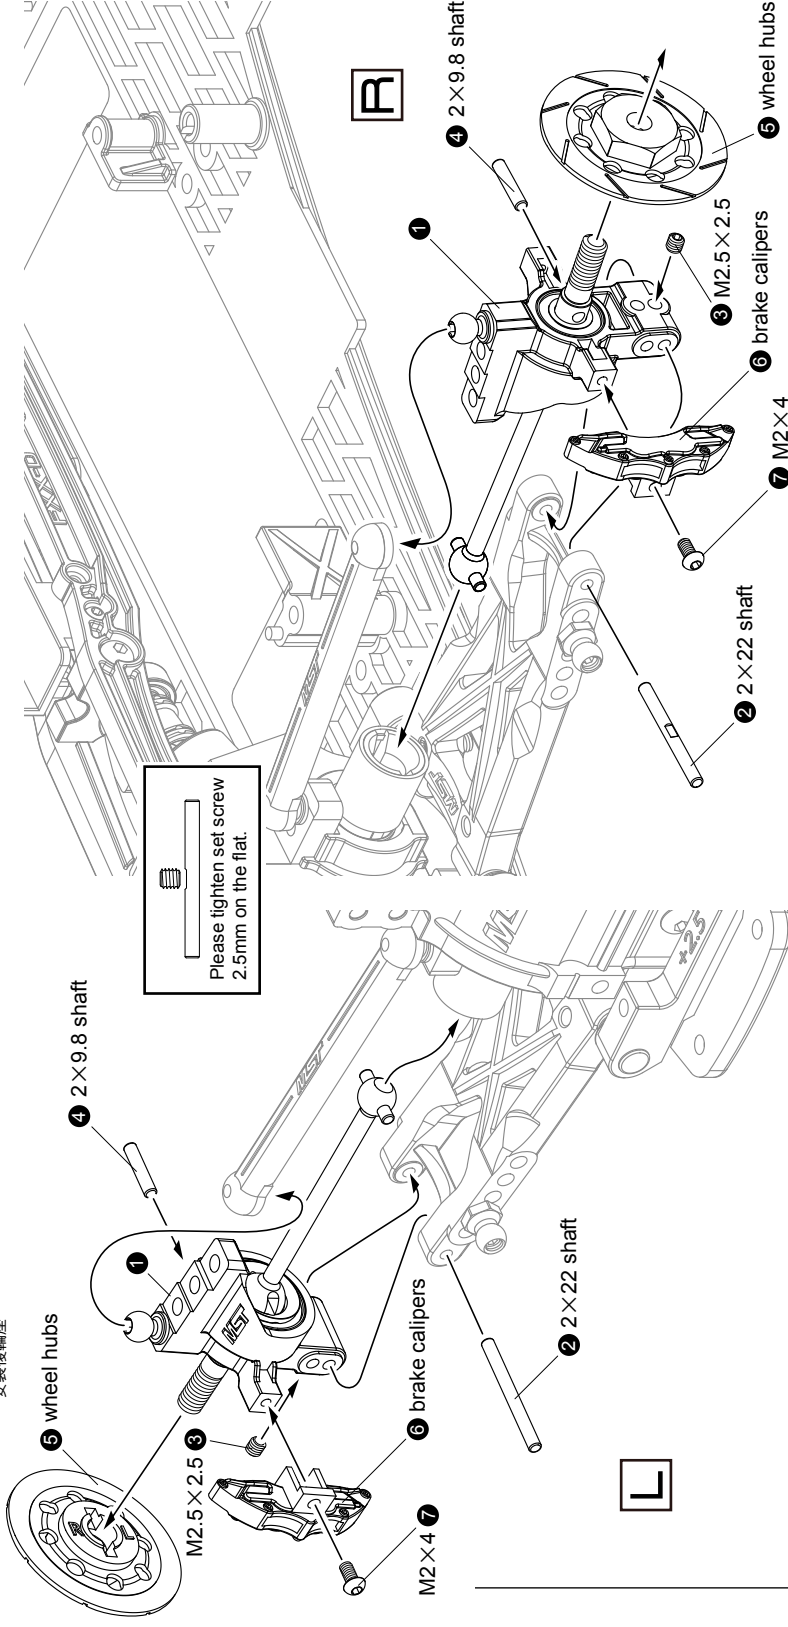

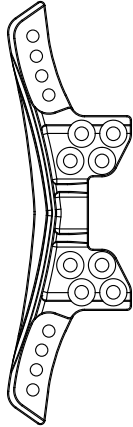

Front damper stay × 1
前避震架

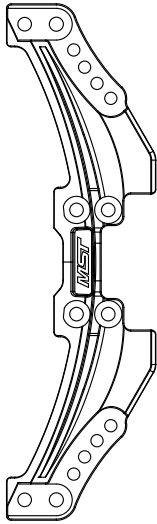

Rear damper stay × 1
後避震架



M3 × 8 screw × 4
圓頭螺絲



M3 × 8 screw × 2
止付螺絲



M3 × 10 screw × 2
止付螺絲



3 × 8 screw × 4
自攻螺絲




4.8 Copper hex ball × 4
4.8 銅製外六角球頭




3 × 5.5 × 2 spacer
墊片


OPTIONAL PARTS

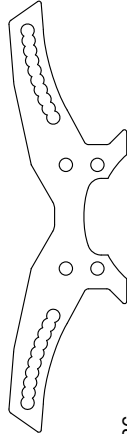



210386
FXX Carbon front damper stay 3.5
FXX 碳纖維前避震架 3.5

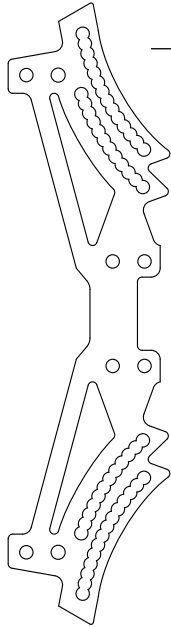




210387
FXX Carbon rear damper stay 3.5
FXX 碳纖維後避震架 3.5

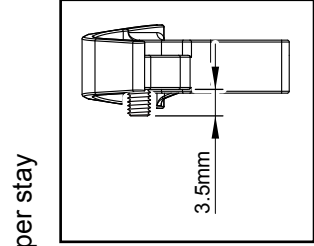


STEP 1
Attaching front damper stay
安裝前避震架

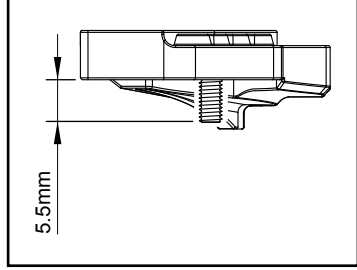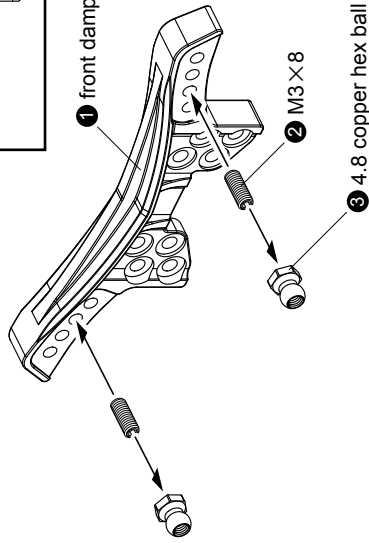


STEP 2
Attaching rear damper stay
安裝後避震架

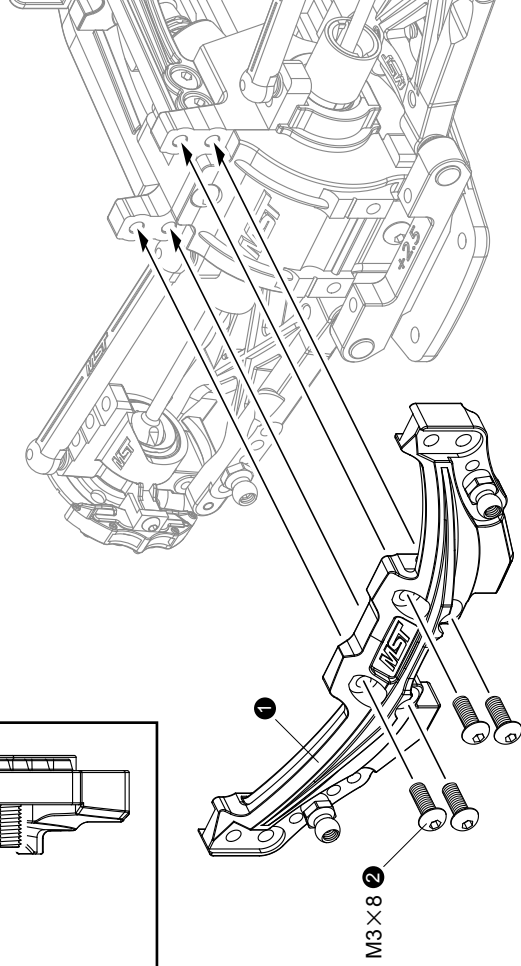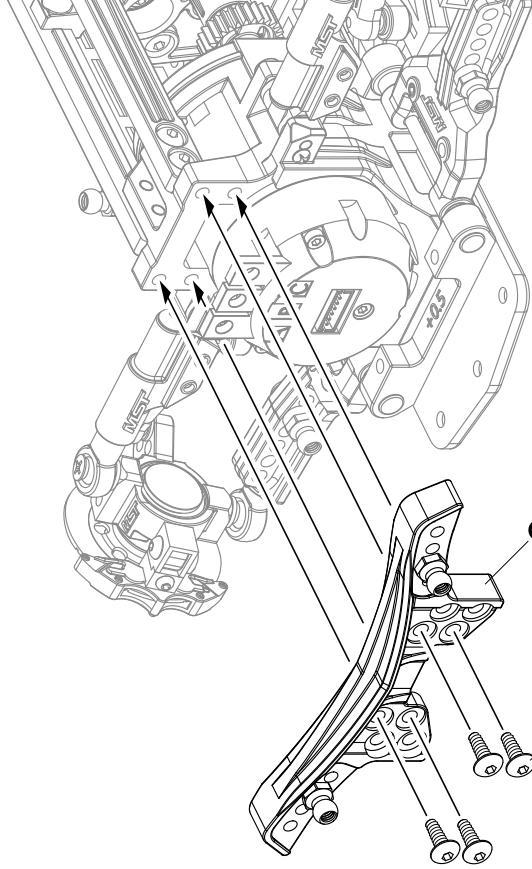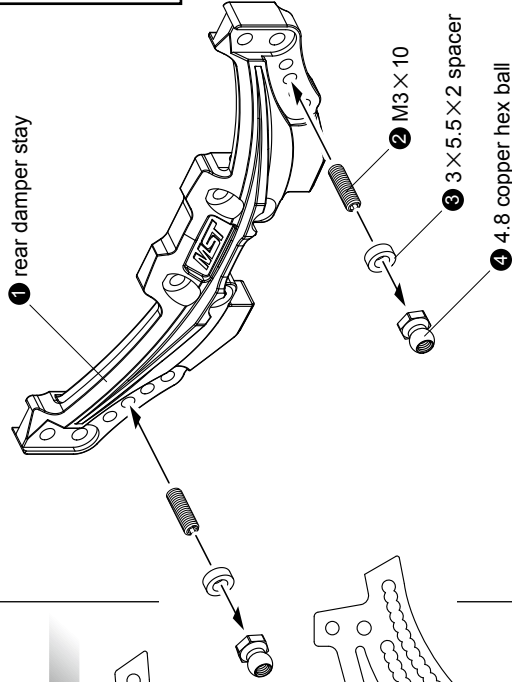


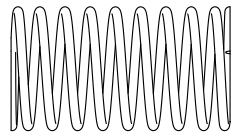


Coil spring 29mm × 2
(silver)
避震彈簧 29mm (銀)

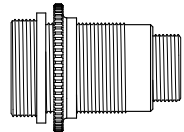


Damper cylinder × 4
避震筒身

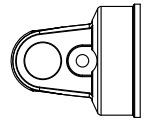

Cylinder cap × 4
避震器上蓋

 

Rod guide cap × 4
避震器下蓋

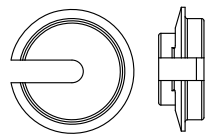


Damper retainer × 4
避震器彈簧座




Oil seal × 4
避震器氣室



Rod guide × 4
避震器下蓋墊片

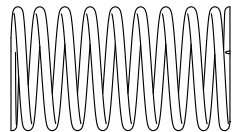

 
Soft coil spring 29mm × 2
(red)
軟避震彈簧 29mm (紅)




Piston rod × 4
避震軸心



 Piston × 4
避震活塞



Damper adjuster × 4
避震器拉桿

 

10.8×0.9 O-ring × 4
O環



Damper O-ring P3 × 4
避震器O環








E-clip × 10
E形扣





M3×5 screw × 4
沉頭螺絲

STEP 1 Damper assembly
避震器組裝


X4
Make 4

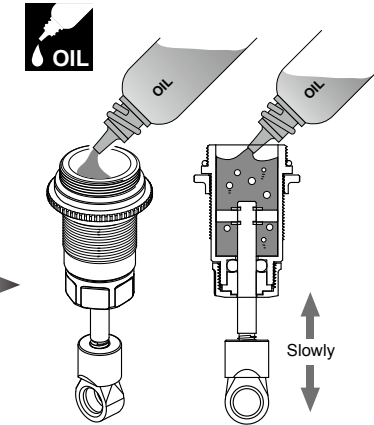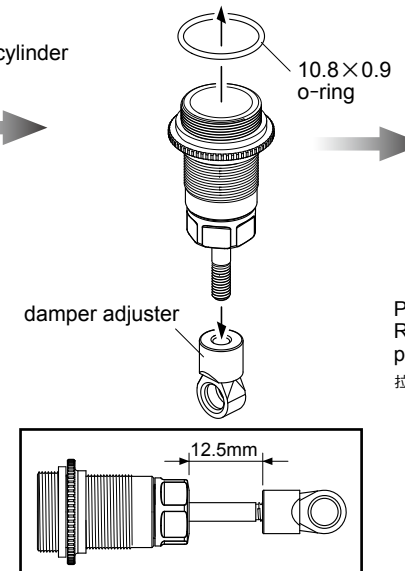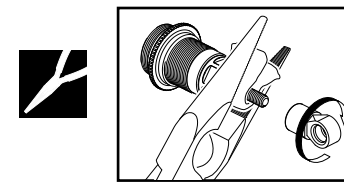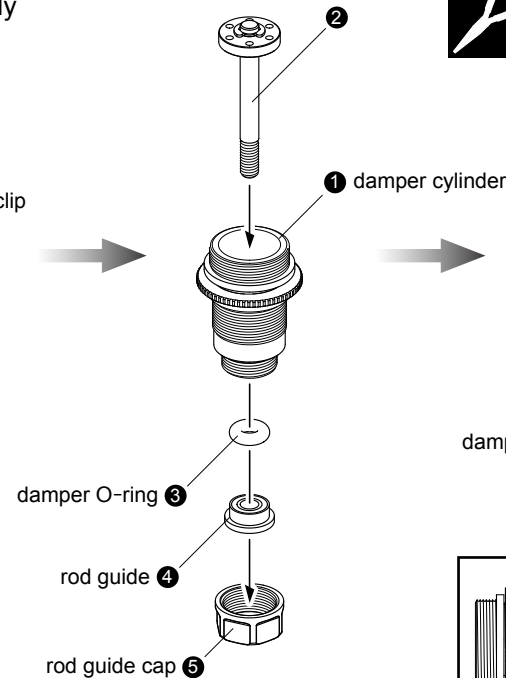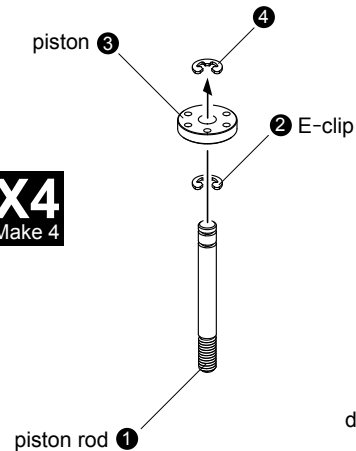


Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入砂油，緩慢上下移動活塞將氣泡移除。

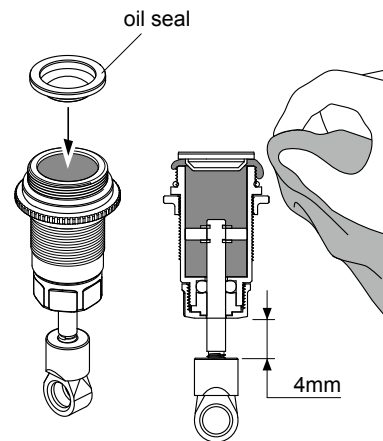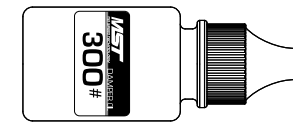

Pull down piston rod 4mm, attach oil seal and absorb oil overflow with tissue paper.
將軸心下拉4mm後，蓋上氣室並以面紙拭去溢出的砂油。

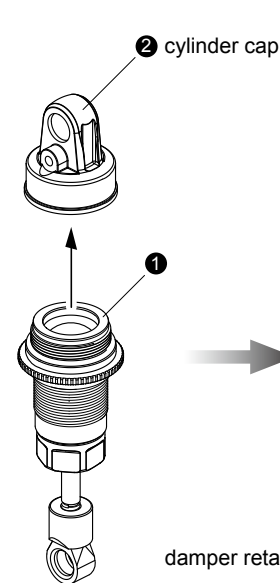

X4
Make 4

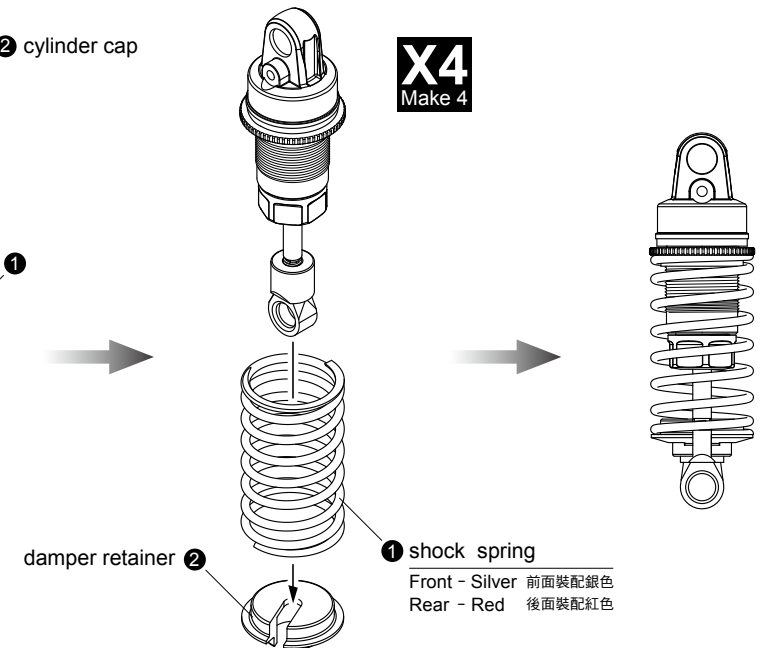

Front - Silver 前面裝配銀色
Rear - Red 後面裝配紅色

STEP 2 Attaching front damper 安裝前避震器

FRONT

M3×5 2

1

 
 
 

STEP 3 Attaching rear damper 安裝後避震器

REAR

M3×5 2

1

PARTS BAG 16 BUMPER & BODY MOUNTS 防撞泡棉 & 車殼固定座

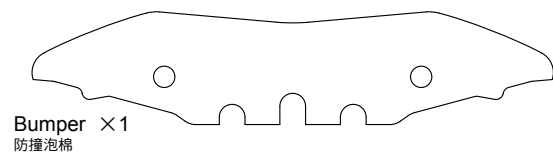


OPTIONAL PARTS






210361
Carbon bumper support 2.5
碳纖維泡棉壓板 2.5

STEP 1 Bumper assembly 前防撞板組裝

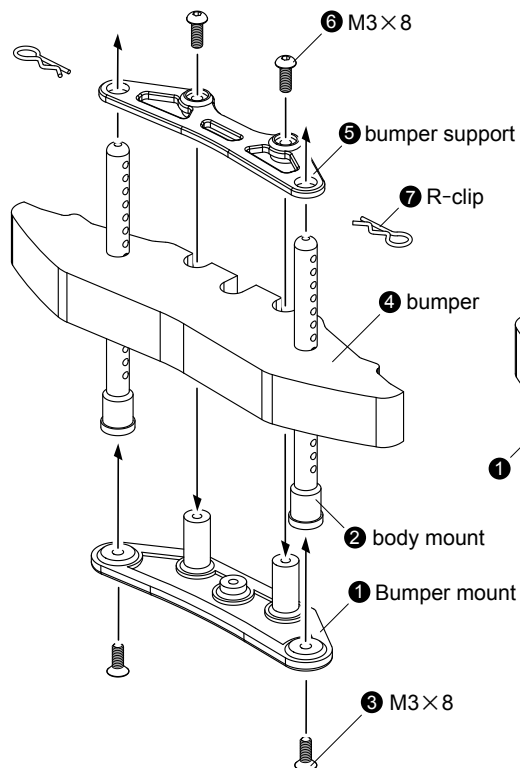


 STEP 2 Attaching body mounts 安裝車殼固定座

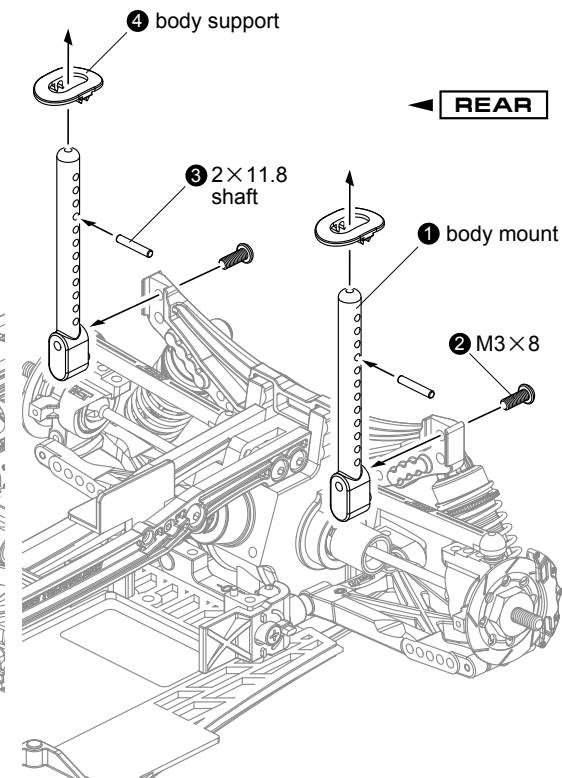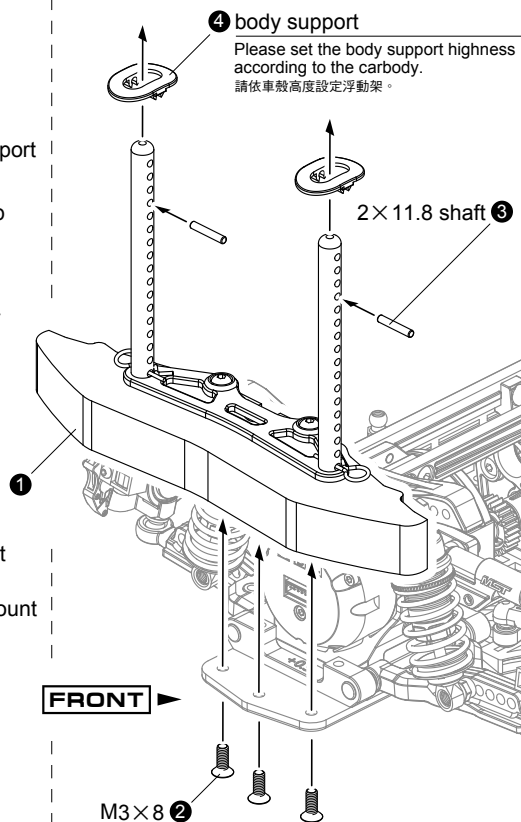




Servo horn 25T ×1
25T 伺服機片

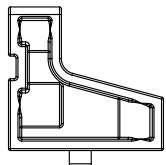

Servo mount set ×2
 伺服機座

 

4.8 adjuster ×2
4.8 拉桿頭



4.8 Copper hex ball ×1
4.8 銅製外六角球頭



3×5.8×3 spacer ×1
墊片



3×6×0.5 spacer ×4
墊片



3×8×0.5 spacer ×1
墊片



M3×6 screw ×1
圓頭螺絲



M3×8 screw ×4
圓頭螺絲



M3×12 screw ×1
圓頭螺絲




M3×8 screw ×2
沉頭螺絲



M3×25 screw ×1
止付螺絲


STEP 1 Steering servo assembly

轉向伺服機組裝

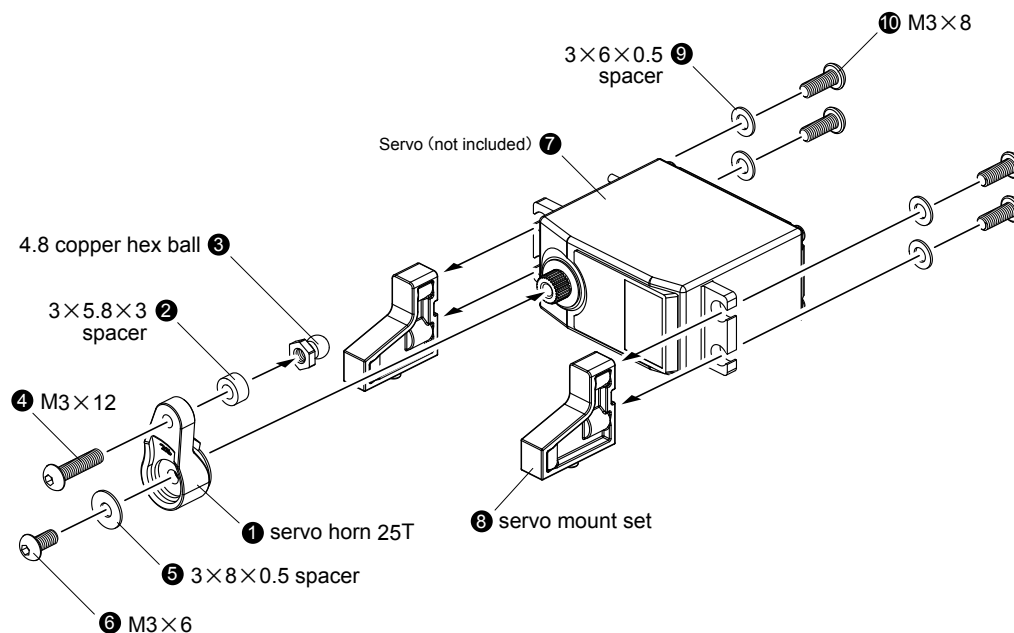



STEP 2 Attaching steering servo

安裝轉向伺服機

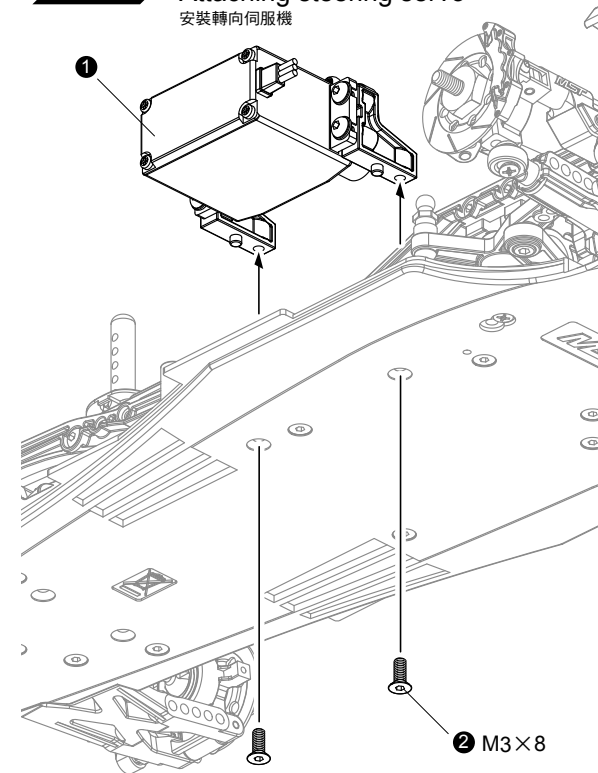


STEP 3 Servo saver turnbuckle assembly

伺服拉桿組裝

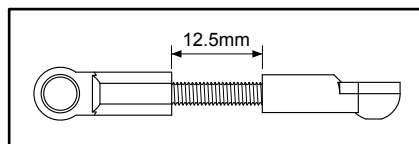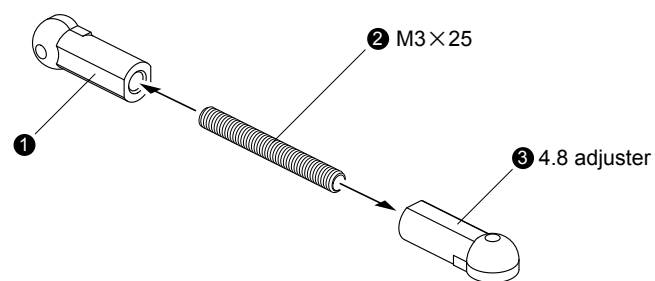


STEP 4 Attaching servo saver turnbuckle


安裝伺服拉桿

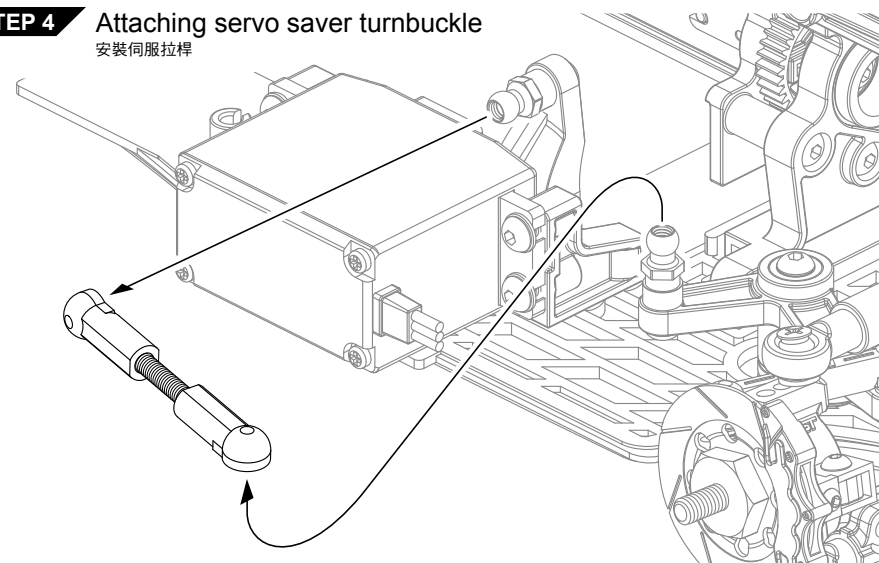

STEP 5 Attaching ESC
安裝電子變速器

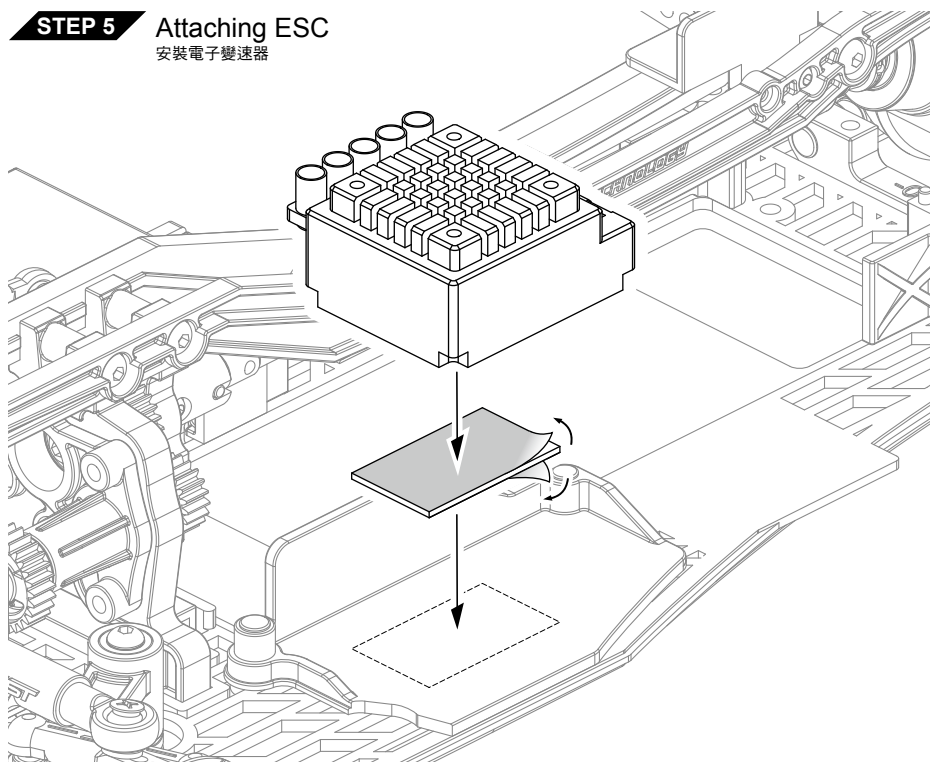


STEP 6 Attaching Gyro
安裝陀螺儀

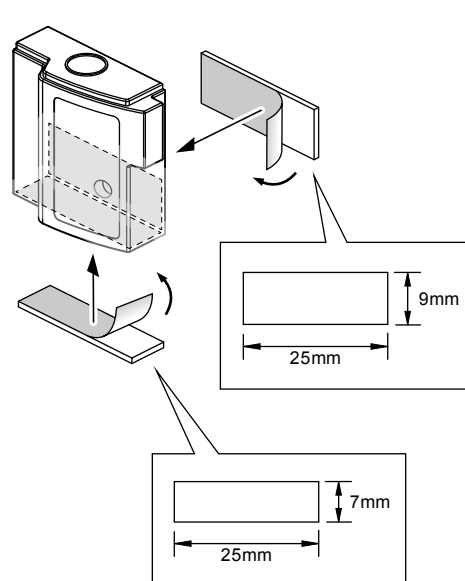


※ Please refer to gyro instructions for setting and installing.
陀螺儀的設定及組裝，請詳閱內附說明書。

STEP 7 Attaching receiver
安裝接收機

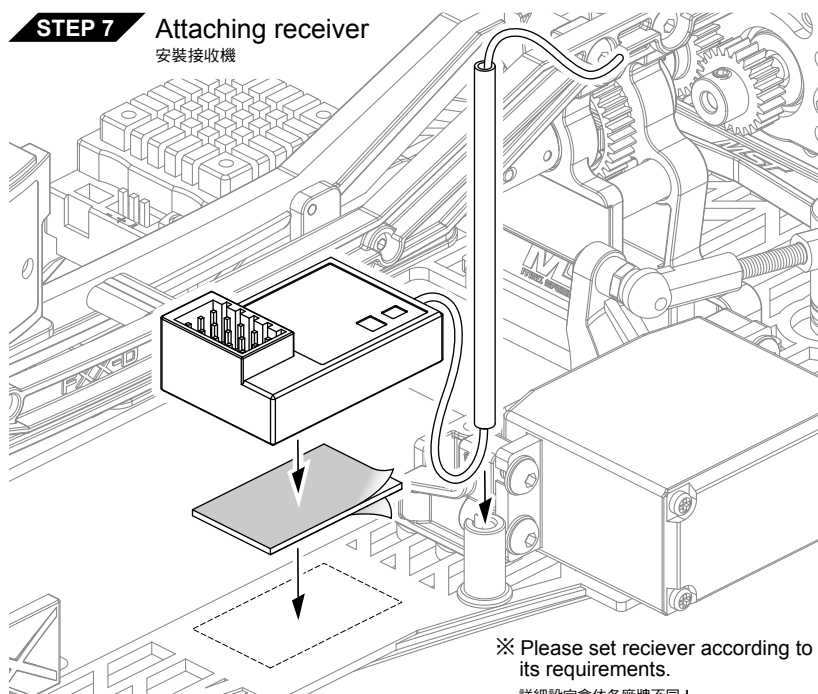

※ Please set receiver according to its requirements.
詳細設定會依各廠牌不同！

STEP 8 Attaching battery
安裝電池

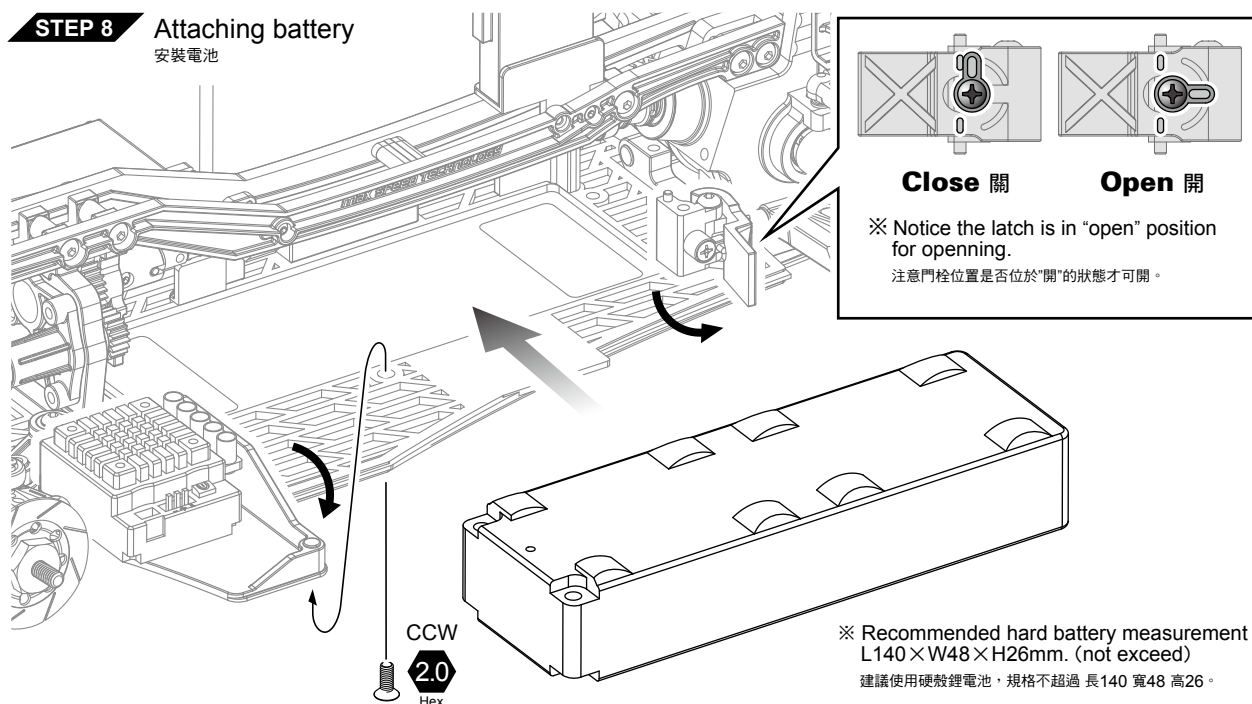




CS-R Tire ×4
CS-R 甩尾胎




M4 flange nut ×4
M4 凸緣螺帽

※ Please make the object as the standard.
請以實物為主。

OPTIONAL PARTS

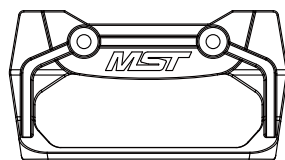


210379
Rear bumper
後防撞板

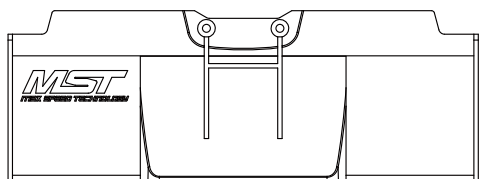


210282
MST diffuser
MST 後擾流板

STEP 1 Attaching front wheels 安裝前輪

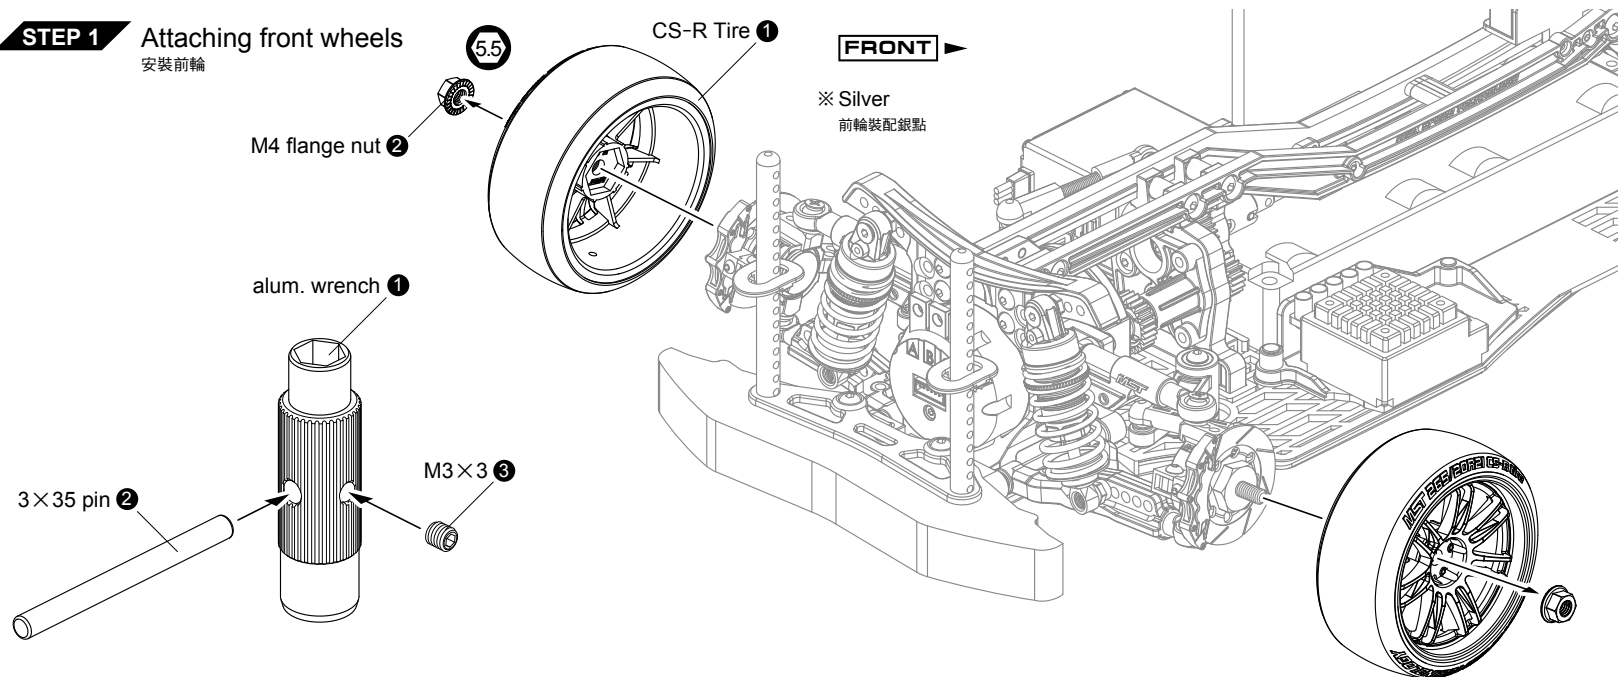

STEP 2 Attaching rear wheels 安裝後輪

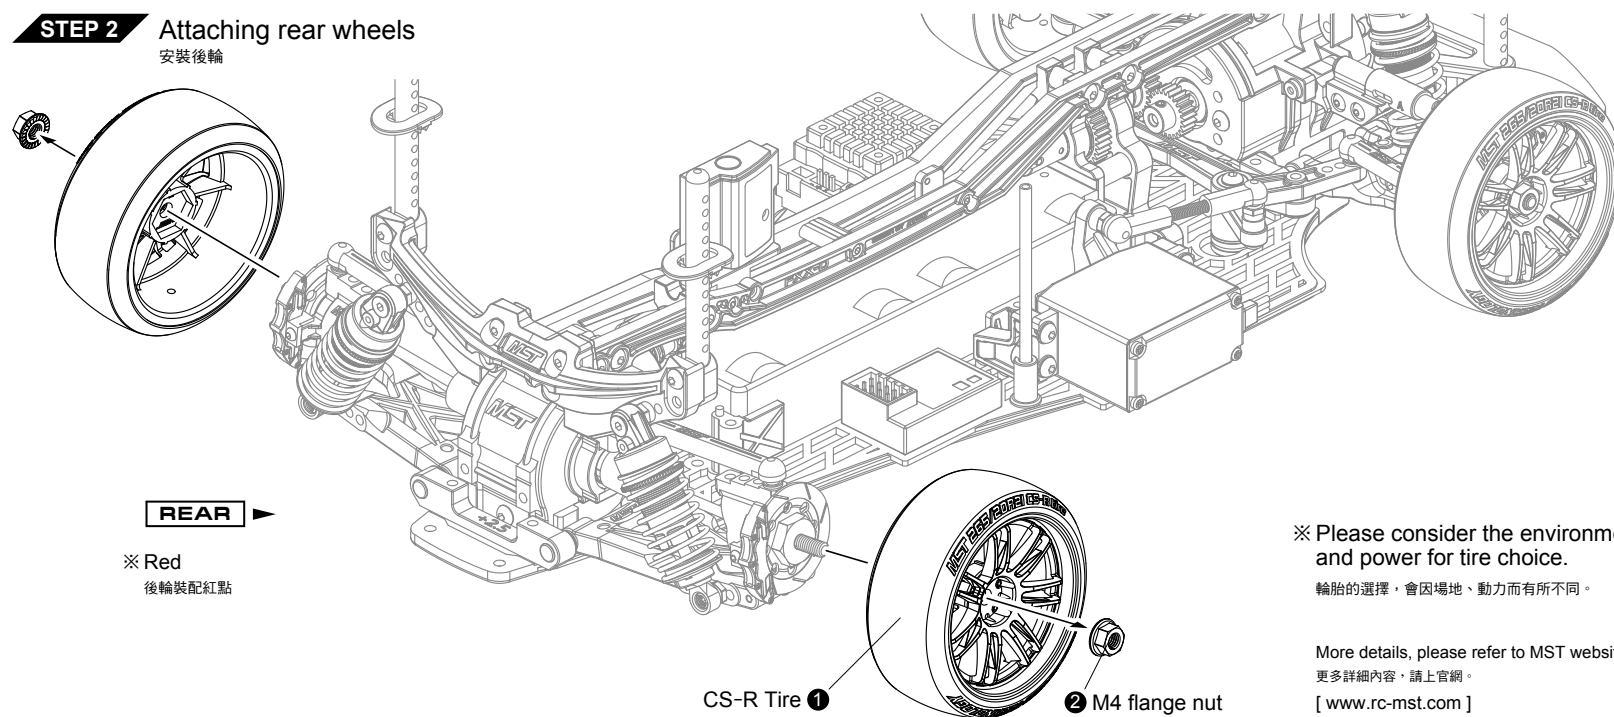


※ Please consider the environment
and power for tire choice.

輪胎的選擇，會因場地、動力而有所不同。

More details, please refer to MST website.
更多詳細內容，請上官網。


[www.rc-mst.com]

DATE: _____ SURFACE: _____ NOTE: _____
 TRACK: _____ GRIP: _____

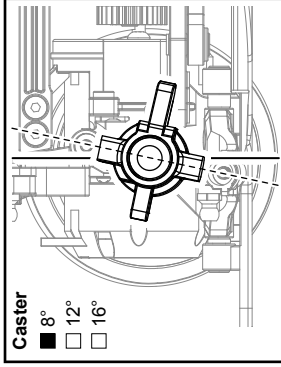


Caster

- ☒ 8°
- ☐ 12°
- ☐ 16°

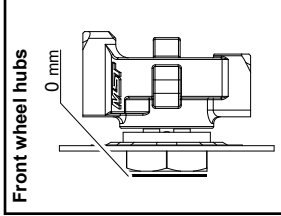


Front wheel hubs

0 mm

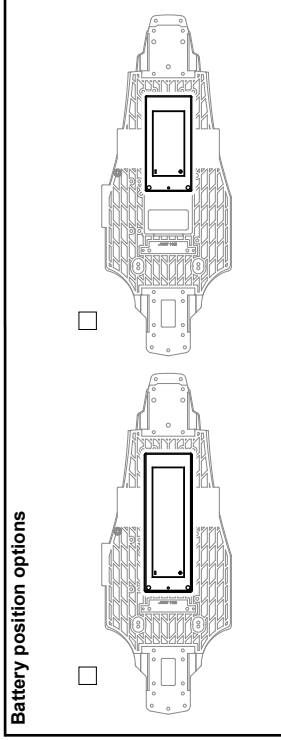


Battery position options

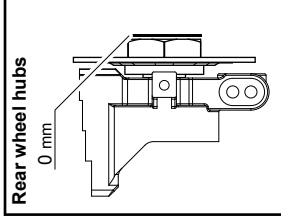

Rear wheel hubs

0 mm

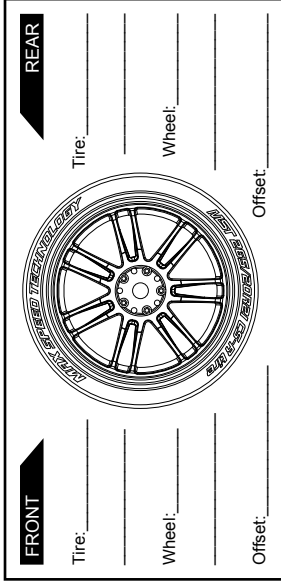

FRONT

Tire: _____

Wheel: _____


Offset: _____

REAR

Tire: _____

Wheel: _____

Offset: _____

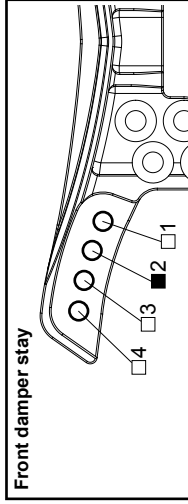


Front damper stay

Camber: 4°

Toe-in: 0°


Ride height: 5 mm

GROUND

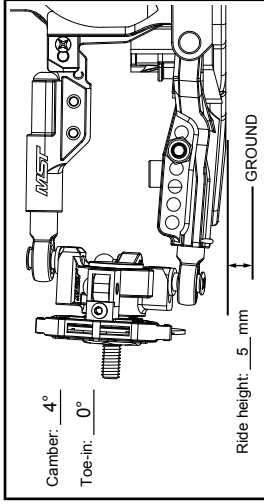


Front rollcenter

0 mm

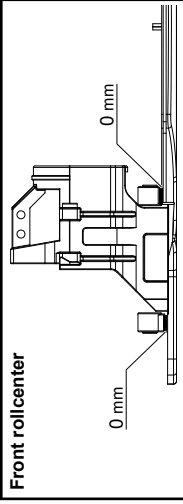

Front lower arm

1 2 3 4 5 6

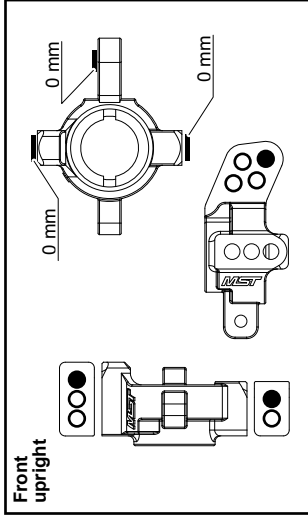


Front upright


0 mm

0 mm


0 mm

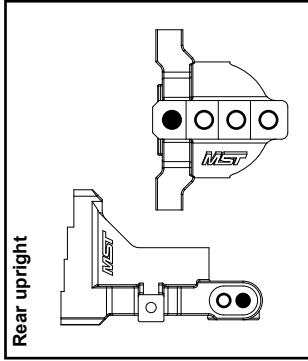

Rear upright

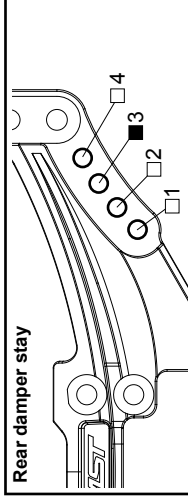

Rear damper stay

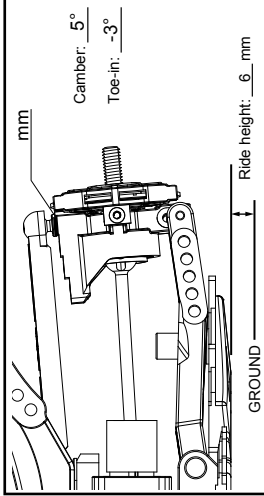


Camber: 5°

Toe-in: -3°

Ride height: 6 mm


GROUND

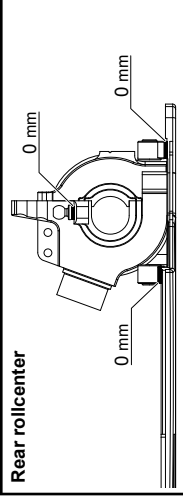

Rear rollcenter


0 mm

0 mm

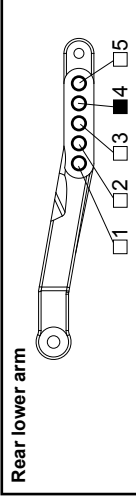

Rear lower arm

1 2 3 4 5

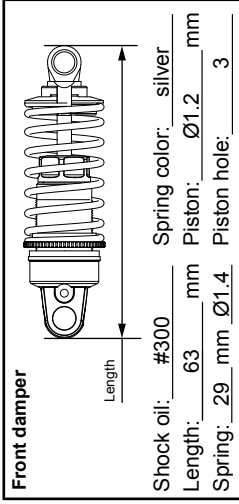


Front damper

Length

Shock oil: #300 Spring color: silver

Length: 63 mm Piston: Ø1.2 mm

Spring: 29 mm Ø1.4 Piston hole: 3

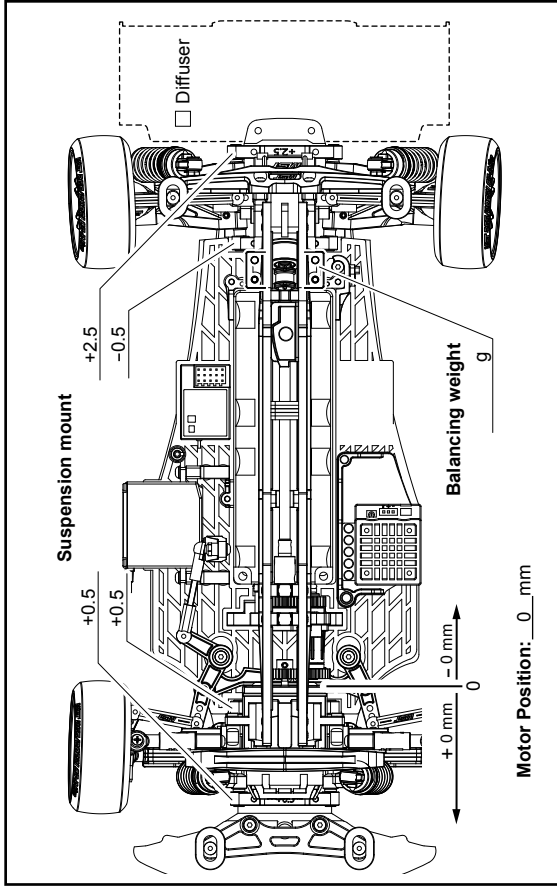

Suspension mount

+2.5

-0.5

+0.5

+0.5

Diffuser

Balancing weight

g

-0 mm


0

Motor Position: 0 mm

Gear A × Gear C × Big Bevel Gear ÷ Gear B ÷ Small Bevel Gear ÷ Pinion Gear = Gear ratio

28T × 36T × 36 T × 36 T ÷ 20T ÷ 17 T ÷ T =

Motor & ESC: _____ Battery: _____

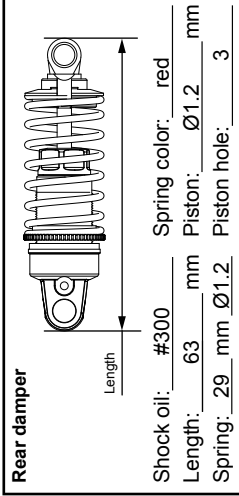


Rear damper

Length

Shock oil: #300 Spring color: red

Length: 63 mm Piston: Ø1.2 mm

Spring: 29 mm Ø1.2 Piston hole: 3

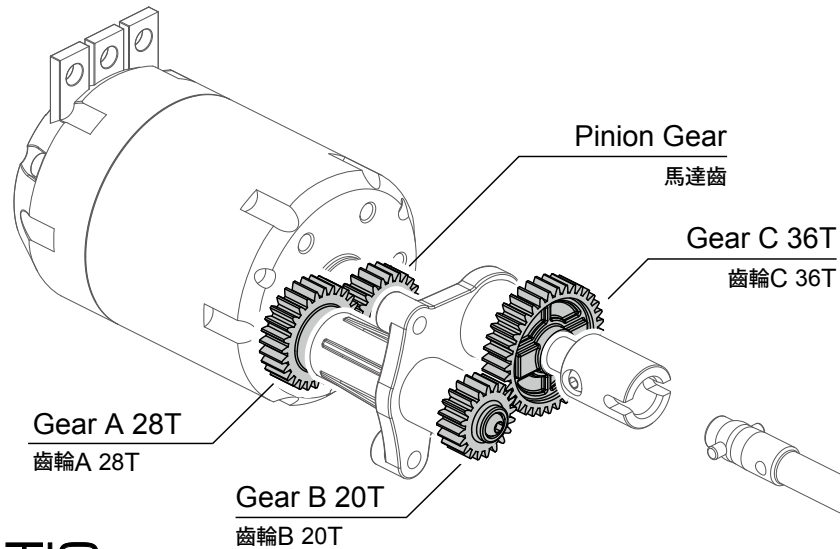


	1st Reduction Gear 1次減速齒	2nd Reduction Gear 2次減速齒	3rd Reduction Gear 3次減速齒
PASSIVE GEAR 被動齒	Gear A 齒輪A 28T	Gear C 齒輪C 36T	Big Bevel Gear 大傘齒 36T
ACTIVE GEAR 主動齒	Pinion Gear 馬達齒	Gear B 齒輪B 20T	Small Bevel Gear 小傘齒 17T

* Please set the gear ration according to motor specifications, envirements, and personal requirements.
齒比的選擇會因馬達規格、場地形態、車手手感，而有不同選擇。
可先參考當地配置後再選擇齒輪比！

GEAR RATIO 齒比表

For Gear A 28T				
	3rd Reduction rate. 3次減速比			
Pinion Gear 馬達齒	210362 32T/18T 1.78	210026 34T/18T 1.89	210034 36T/17T 2.12 Original setting	210025 40T/16T 2.50
18	4.98	5.29	5.93	7.00
19	4.72	5.01	5.62	6.63
20	4.48	4.76	5.34	6.30
21	4.27	4.53	5.08	6.00
22	4.07	4.33	4.85	5.73
23	3.90	4.14	4.64	5.48

For Gear A 30T (210402)				
	3rd Reduction rate. 3次減速比			
Pinion Gear 馬達齒	210362 32T/18T 1.78	210026 34T/18T 1.89	210034 36T/17T 2.12 Original setting	210025 40T/16T 2.50
16	6.00	6.37	7.15	8.44
17	5.64	6.00	6.73	7.94
18	5.33	5.67	6.35	7.50
19	5.05	5.37	6.02	7.11
20	4.80	5.10	5.72	6.75
21	4.57	4.86	5.45	6.43

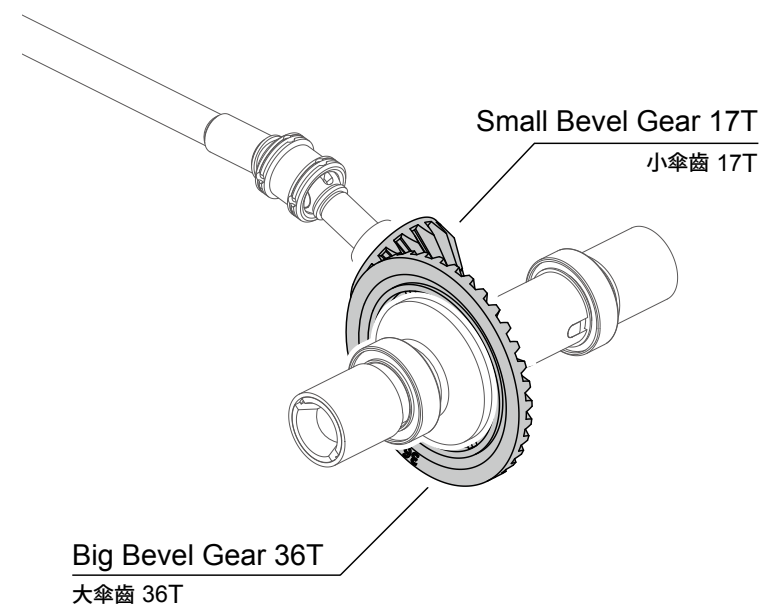

※ **FORMULA**
終傳比計算式

Gear A × Gear C × Big Bevel Gear ÷ Gear B ÷ Small Bevel Gear ÷ Pinion Gear = Transmission ratio

齒輪A × 齒輪C × 大傘齒 ÷ 齒輪B ÷ 小傘齒 ÷ 馬達齒 = 終傳比



EXX-D S

1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

INSTRUCTION
MANUAL

www.rc-mst.com

[facebook.com/MST.lw]

